



VS373

Radar Fall Detection Sensor

User Guide

Contents

| | |
|---|-----------|
| Chapter 1. Preface..... | 5 |
| Copyright Statement..... | 5 |
| Safety Instruction..... | 5 |
| Revision History..... | 6 |
| Chapter 2. Product Introduction..... | 7 |
| Overview..... | 7 |
| Key Features..... | 7 |
| Chapter 3. Hardware Introduction..... | 8 |
| Packing List..... | 8 |
| Hardware Overview..... | 8 |
| DO Wiring..... | 9 |
| Button and LED Descriptions..... | 9 |
| Dimensions (mm)..... | 10 |
| Chapter 4. Power Supply..... | 11 |
| Chapter 5. Installation..... | 12 |
| Scenario Recommendation..... | 12 |
| Installation Location..... | 12 |
| Installation Steps..... | 13 |
| Factors Affecting Accuracy..... | 18 |
| Chapter 6. Access the Sensor..... | 19 |
| Chapter 7. Operation Guide..... | 21 |
| Configure Room and Targets Parameters | 21 |
| Setting Room Parameters..... | 21 |
| Configuring Targets Detection Parameters..... | 22 |
| Configure General Settings..... | 24 |
| Fall Alarm..... | 24 |
| Lying Alarm..... | 28 |

| | |
|--|-----------|
| Dwell Alarm..... | 30 |
| Motionless Alarm..... | 31 |
| Sleep Detection..... | 33 |
| Information..... | 33 |
| Configure Sub Regions..... | 35 |
| Draw Door Sub-Region..... | 36 |
| Draw Bed Sub-Region..... | 38 |
| Draw Custom Sub-Region..... | 41 |
| Draw Ignore Sub-Region..... | 43 |
| Configure Hardware Settings..... | 45 |
| Configure Data Transmission..... | 46 |
| LoRa..... | 46 |
| Milesight D2D..... | 50 |
| WLAN..... | 55 |
| System Settings..... | 59 |
| Device..... | 59 |
| User..... | 60 |
| Maintenance..... | 63 |
| Chapter 8. Uplink and Downlink(LoRa)..... | 65 |
| Overview..... | 65 |
| Uplink Packets..... | 65 |
| Basic Information..... | 65 |
| Periodic Report..... | 66 |
| Alarm Report..... | 70 |
| Historical Data..... | 71 |
| Downlink Commands..... | 72 |
| General Setting..... | 73 |
| Detection..... | 74 |
| Sub Region..... | 76 |

Contents

| | |
|---|-----------|
| Advance Setting..... | 78 |
| LoRaWAN [®] Setting..... | 78 |
| Data Retransmission..... | 79 |
| Milesight D2D Setting | 79 |
| Historical Data Enquiry..... | 81 |
| Chapter 9. Communication Protocol(WLAN)..... | 84 |
| Periodic Report..... | 84 |
| Trigger Report..... | 85 |
| Occupancy Trigger..... | 85 |
| Out-of-Bed Alarm..... | 85 |
| Fall Alarm..... | 86 |
| Dwell Alarm..... | 86 |
| Lying Alarm..... | 87 |
| Breathing Detection..... | 87 |
| Chapter 10. Services..... | 89 |

Chapter 1. Preface

Copyright Statement

This guide may not be reproduced in any form or by any means to create any derivative such as translation, transformation, or adaptation without the prior written permission of Xiamen Milesight IoT Co., Ltd (Hereinafter referred to as Milesight).

Milesight reserves the right to change this guide and the specifications without prior notice. The latest specifications and user documentation for all Milesight products are available on our official website <http://www.milesight.com>

Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss. Milesight will not shoulder responsibility for any loss or damage resulting from not following the instructions of this operating guide.



Warning:

Serious injury or death may be caused if any of these warnings is neglected.

- To avoid risk of fire and electric shock, do keep the product away from rain and moisture before installation.
- Do not touch components which may be hot.
- Make sure the plug is firmly inserted into the power socket.
- Make sure the device is firmly fixed when installing.
- The device must not be disassembled or remodeled in any way.



CAUTION:

Injury or equipment damage may be caused if any of these cautions are neglected.

- Do not place the device where the temperature is below/above the operating range.
- The device must never be subjected to shocks or impacts.
- Do not expose the device to where a laser beam equipment is used.



- To prevent heat accumulation, do not block air circulation around the device.
- Do not use volatile solvents such as alcohol, benzene or thinners as they may damage the surface finishes.

Revision History

| Release Date | Version | Revision Content |
|--------------------|---------|---|
| January 22, 2025 | V1.0 | Initial version |
| September 26, 2025 | V1.1 | <ol style="list-style-type: none"> 1. Add Lying Alarm. 2. Added Breathing Detection. 3. Introduced AI Fall Alarm Filtering. 4. Added Digital Output alarm. 5. Added Ignore sub-region. 6. Added support for data transmission via WiFi STA mode. 7. Supports multi-person fall alarms (for special scenarios). 8. Supports out-of-bed alarms for multi person. 9. Sub-region limit increased from 4 to 6. 10. Optimized interface: separated room settings and detection configuration, improved sub-region layout, enhanced information page, and merged LoRa and D2D pages. |

Chapter 2. Product Introduction

Overview

VS373 is a Radar Fall Detection Sensor that adopts a Millimeter Wave Radar to detect fall. It enables non-contact human detection using point cloud data and triggers fall alarms. With up to 99% fall detection accuracy, it helps ensure user safety.

With easy configuration and wireless detection, the VS373 supports Wi-Fi communication, enabling high-speed data transmission. It also supports LoRaWAN[®] communication and can be integrated with the Milesight LoRaWAN[®] gateway and Milesight Development Platform, enabling remote monitoring, data visualization, and centralized management. As a Milesight D2D controller & agent, the VS373 seamlessly communicates with other Milesight D2D devices, establishing more connections and paving the way for smoother operations. It can also be connected to an alarm switch to notify relevant personnel for emergency response.


VS373 can be used in living rooms, bathrooms, bedrooms, kitchens, hospital wards, care homes, and other spaces where falls may occur.

Key Features


- Equipped with Millimeter Wave Radar, it can overcome the adverse effects of light and water mist, which make it able to penetrate some obstacles
- Equipped with a millimeter-wave MIMO array antenna (24 Transmitters & 22 Receivers), it can provide higher precision and reliability
- Support continuous 24-hour detection and management capabilities, it does not rely on visible light and can operate stably both day and night
- Support fall detection with a 99% fall capture rate and less than 1% false alarm rate
- Supports adding sub-regions for independent detection
- Support multi-bed presence detection, leaving the bed within the scheduling time will trigger an alarm
- Supports breathing detection by sensing chest movement and providing a reference breathing rate
- 100% privacy protection, no images will be captured
- Support on-site alarms of buzzer and LED indicator and provide backend reporting of alarm information, enabling timely notification of any emergency
- Stores historical data locally and supports retransmission to prevent data loss
- Supports convenient data transmission via Wi-Fi
- Compliant with standard LoRaWAN[®] gateways and network servers
- Support Milesight D2D protocol to enable ultra-low latency and direct control without gateways

Chapter 3. Hardware Introduction


Packing List

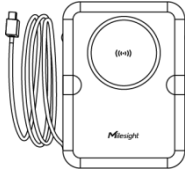


1 × VS373 Device

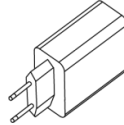


1 × Type-C Power Adapter

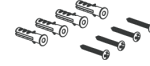

4 × Ceiling Mounting Kits

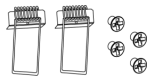


2 × Spring Clips

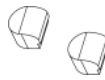

2 × Silicone Plugs



1 × DO Wiring

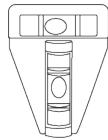

1 × T-shaped Spirit Level



1 × Warranty Card




1 × Quick Guide




Note:

If any of the above items is missing or damaged, please contact your sales representative.


Hardware Overview

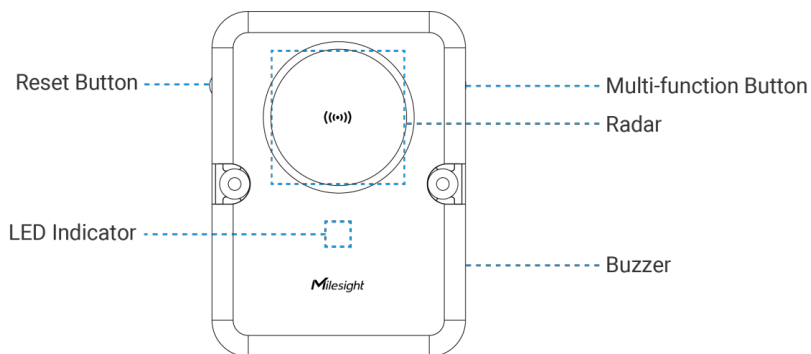

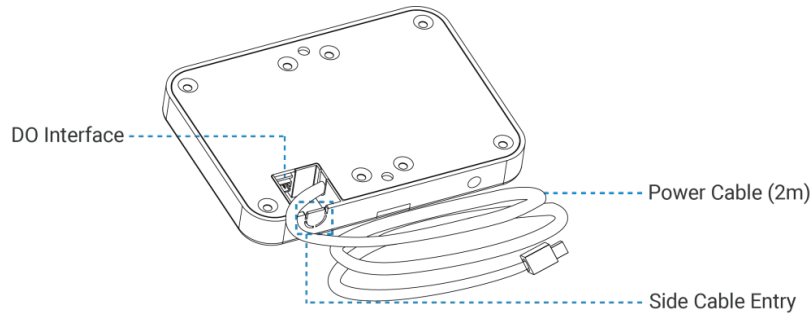

DO Wiring

When alarms are confirmed, the DO will trigger a high level signal (connected) until the alarm is released. For customizable alarm types, please see [Hardware Settings](#).

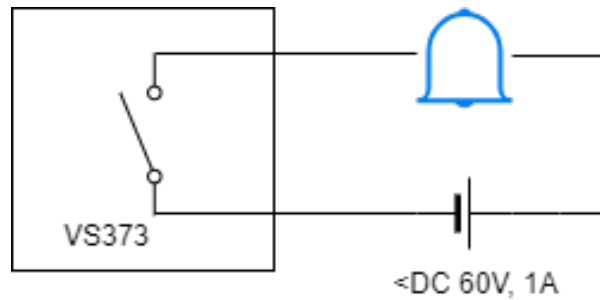

Button and LED Descriptions




Note:

Remove the silicone plug from the reset button before use.

| Function | Action & Description | LED Indication |
|--------------------------|--|--------------------------------------|
| Turn On/Off Wi-Fi | Press and hold the Multi-function button for 2~5 seconds | Wi-Fi On: Green Light on |
| | | Wi-Fi Off: Green Light Blinks Slowly |
| Enable Wi-Fi STA Mode | Press and hold the Multi-function button for 2~5 seconds | Blue Light on |
| Turn On Radar | Radar Initializing | Green Light Blinks Quickly |
| Reset to Factory Default | Press and hold the reset button for 10 seconds | Blue Light Blinks Quickly |


| Function | Action & Description | LED Indication |
|--------------------|---|---------------------------------------|
| Fall Alarm | Fall event occurred | Red Light Blinks Quickly |
| Stop Alarm | Press and hold the reset button for 6~9 seconds | Green Light Stays On or Blinks Slowly |
| Device Abnormality | Radar anomaly; WiFi anomaly | Red Light Stays On |

Dimensions (mm)

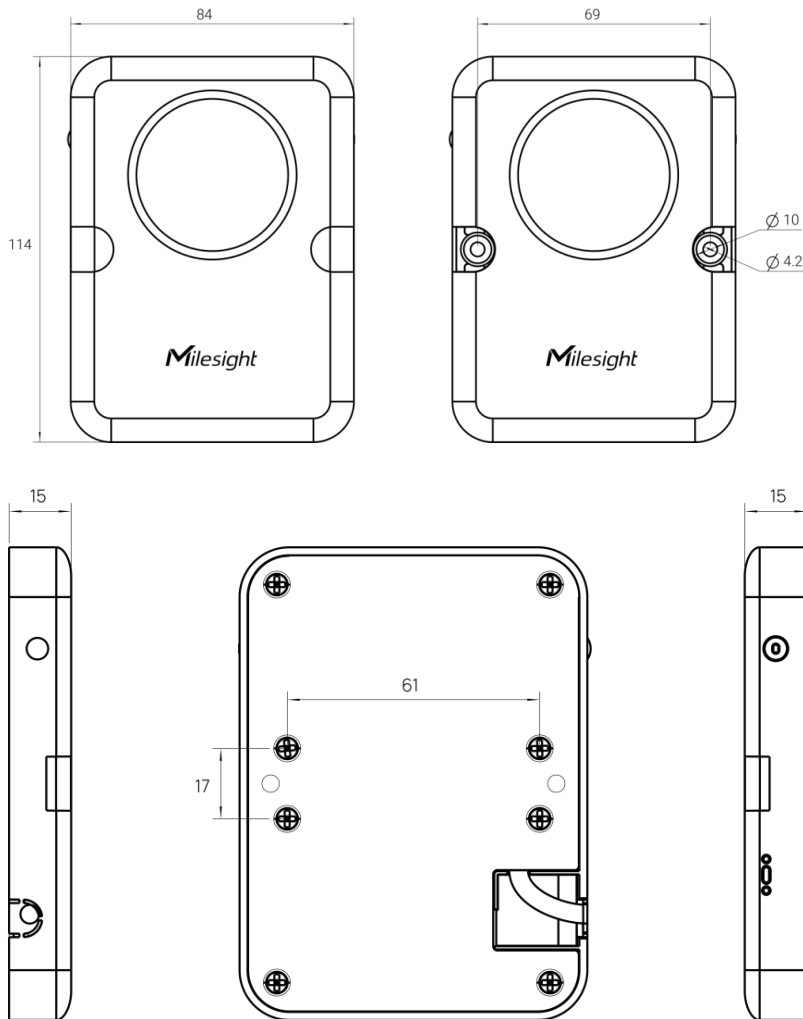

Chapter 4. Power Supply

- Powered by Type-C Power Adapter (5V, 3A)

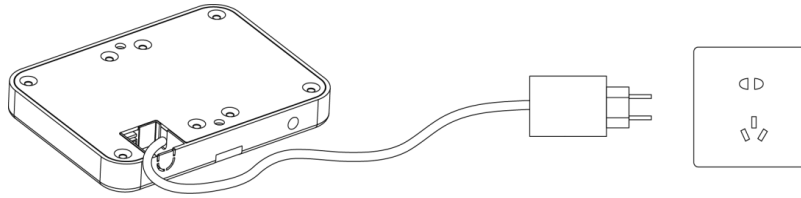

Note:

If the default power cable length does not suit your application, please add a Type-C extension cable and ensure the length of extension cable matches the formula below:

$$R * 3A \leq 5V - 4.2V$$

Where:

R—Cable Resistance in Ω , refer to [Wire Resistance Calculator](#).

Chapter 5. Installation

Scenario Recommendation

| Recommendation | Scenarios |
|--------------------|---|
| Most Recommended | Bedrooms (10-20 m ²) with enough walking space |
| | Hospital rooms (Active area of every patient: 8-20 m ²) |
| | Residential toilets (4-15 m ²) |
| | Public toilets (every cubicle: 3-5 m ²) |
| | Accessible toilets (≥ 4.5 m ²) |
| Medium Recommended | Narrow spaces ($\geq 2 \times 2$ m ²) |
| | Places with ceiling fans |
| Not Recommended | Factories/warehouses where there are a large number of metal brackets, moving trolleys and other interfere with radar detection |
| | Outdoor applications with multiple detection targets and multiple interference factors |
| | Hotels or conference rooms where fall detection is not a primary requirement |
| | Narrow spaces under 2×2 m ² |



Note:


1. The reference area size is for 1 device unit. If your rooms are larger, you need to deploy more than 1 unit ensuring the coverage.
2. If your scenarios are not listed above, please enquire Milesight for details.

Installation Location

Installation Height: 2.3~3m.

Installation Location: Ensure the center of radar placed in the center of detection area. Take a room without any objects as example, place the device on the ceiling with the center of radar matching the

center of the room. The long side of the device should align with the longer dimension of the room, while the short side should align with the shorter dimension of the room.

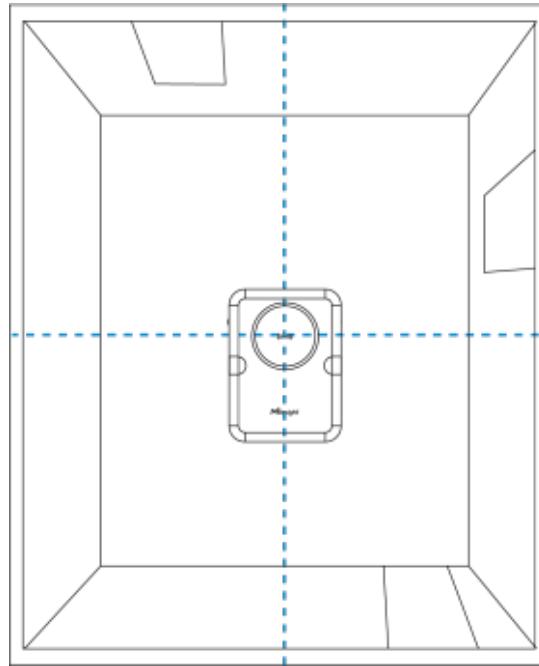
**Note:**

- If the centered position of the room ceiling is not suitable for mounting the device, find a proper position that is at least 1 meter away from the wall.
- Ensure the installation location of the device is flat and stable to avoid tilting or instability.
- Avoid installing the device near ceiling fans or chandeliers.
- Minimize the accumulation of cabinets or clutter within the device's detection range, and avoid the presence of large metal surfaces, mirrors, or other reflective objects nearby.
- The room size, installation height, and detection height should be accurately measured using tools such as a rangefinder or tape measure before setting.

Installation Steps

Ceiling Mount


Step 1: Drill two 6 mm holes aligned with the screw positions of the device, then insert wall plugs into the ceiling.

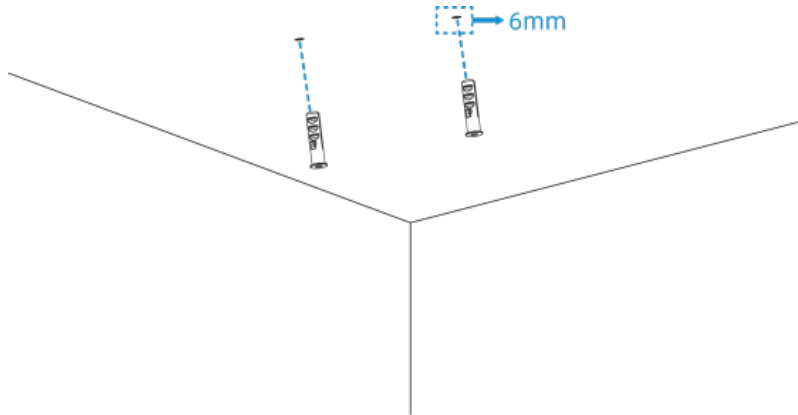

Note:

If you need to hide the power cord inside the ceiling, drill an additional hole for the wire.


Step 2: Cut a side wire hole according to the mark on the device, and thread the power cable through the side wire hole.

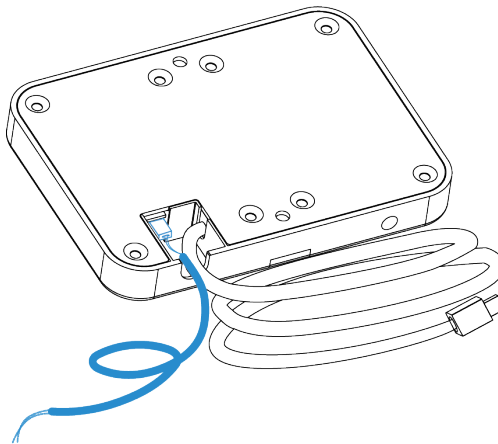


Note:

If the DO wiring is going to be used, please connect the DO wiring to the device, then pass it through the side wire hole.


Step 3: Fix the device to the wall plugs using the mounting screws.

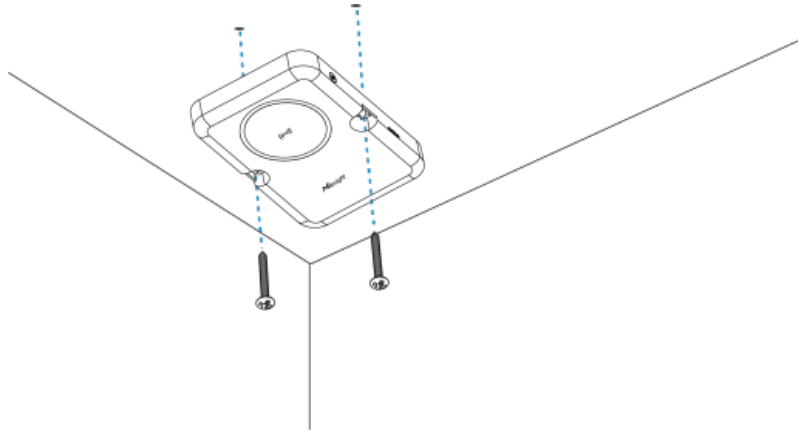

Step 4: Align one edge of the T-shaped Spirit Level with either edge of the device and adjust the device until both water bubbles are centered, ensuring that the device is perfectly parallel.

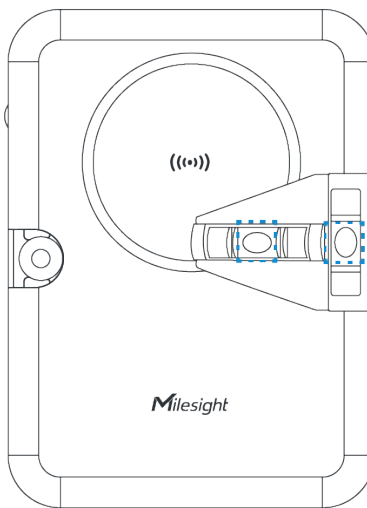


Step 5: Install the silicone plugs.

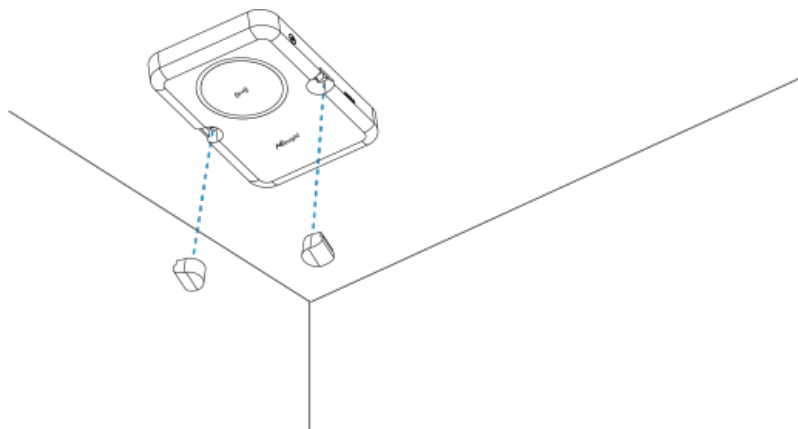


Cutout Mount


Step 1: Drill a hole with a diameter of 76.3~80mm in the ceiling.

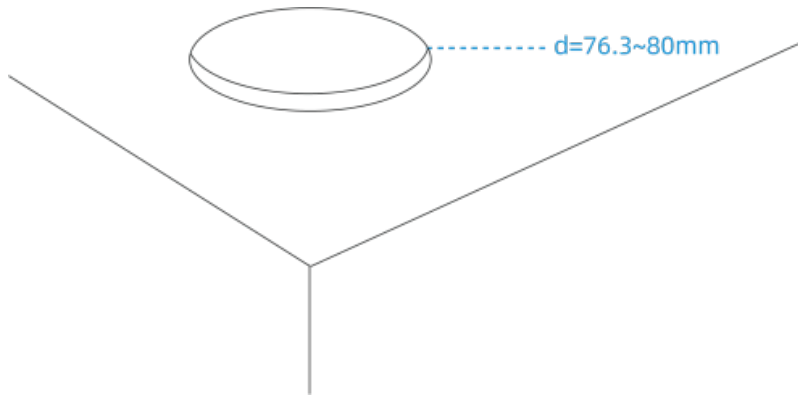

Step 2: Fix the spring clips to the device with screws.

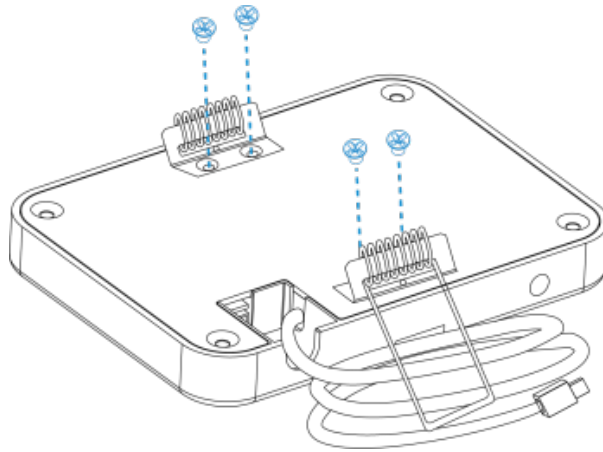

Step 3: Cut a side wire hole according to the mark of the device, and thread the power cable through the side wire hole.

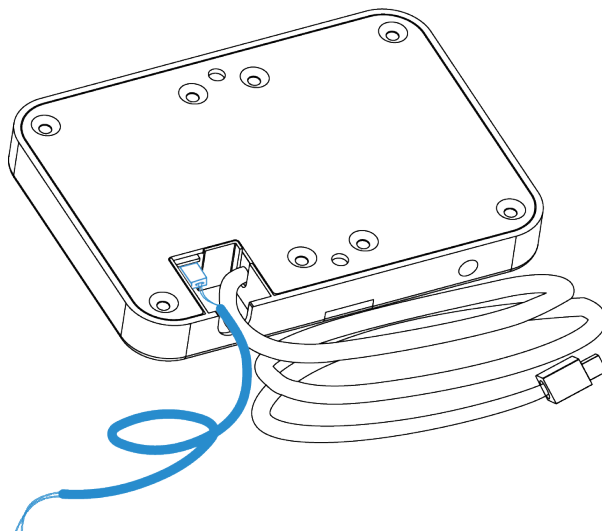





Note:

If the DO wiring is going to be used, please connect the DO wiring to the device, then pass it through the side wire hole.


Step 4: Insert both spring clips vertically into the ceiling hole by hand.

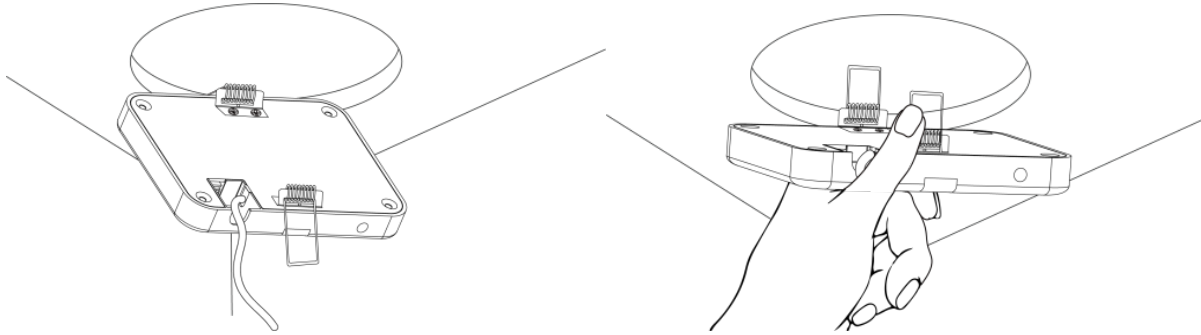

Step 5: Align one edge of the T-shaped Spirit Level with either edge of the device and adjust the device until both water bubbles are centered, ensuring that the device is perfectly parallel.

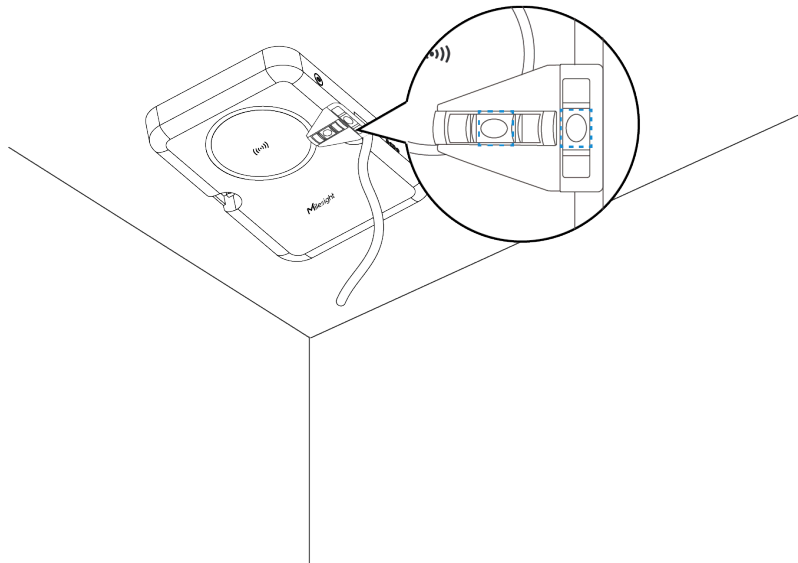

Step 6: After the device is completed, install the silicone plugs.

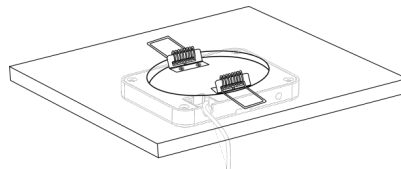

Factors Affecting Accuracy

- The device supports single-person and multi-person fall detection. In multi-person scenarios, alerts are only supported when one person has fallen and another person is completely incapacitated.
- The fall event occurring outside the detection space will not be detected.
- If the device is installed less than 1 m from a wall, missed or false detections may occur.
- If there are large mirrors, glass, or similar objects in the detection area, it can cause multi-path effects, leading to reduced detection accuracy of the radar.
- When the following objects appear in the detection space, they may be misidentified as a fall and trigger an alarm: e.g., robot vacuums, pets, low oscillating fans, or people lying on the floor.

Chapter 6. Access the Sensor

The device provides a user-friendly web GUI for configuration access via Wi-Fi. The default settings are as below:

Wi-Fi SSID: **Fall Detection_xxxxxx** (can be found on the device label)

Wi-Fi IP: **192.168.1.1**



Note:

Check the device LED indicator: A steady green light or steady blue light indicates Wi-Fi is enabled. If the LED indicator blink green slowly, press and hold the multi-function button for 2~5 seconds to turn on Wi-Fi.

Step 1: Enable the Wireless Network Connection on your computer, search for the corresponding for Wi-Fi SSID to connect it, then enter 192.168.1.1 to access the web GUI.

Step 2: Users need to set a password and three security questions when using the sensor for the first time.

Activation

User Name

* Password

* Confirm Password

At least:

- 8 characters
- 2 types of characters: Number, letter and symbol



Set Security Questions

Security Question 1

* Answer 1

Security Question 2

* Answer 2

Security Question 3

* Answer 3



Step 3: After configuration, log in with the username (admin) and the newly set password.



Note:

1. Password must be 8 to 16 characters long and contain at least two of the following: numbers, lowercase letters, uppercase letters and special characters.
2. It is recommended that users regularly update their passwords to enhance device security and prevent unauthorized access.
3. You can click "forgot password" in login page to reset the password by answering the three security questions when you forget the password if you set the security questions in advance.

Chapter 7. Operation Guide

Configure Room and Targets Parameters

Setting Room Parameters

After successful access to the device, you need to set up the detection space.


Navigate to **Rule**→**General Settings**→**Room**, define the cuboid detection space by configuring the distance coordinates (with the radar center as the origin), the space detection height, and the device installation height.



Note:

These parameters should be accurately measured using tools such as a rangefinder or tape measure before setting; otherwise, missed or false detections may occur.

Figure 1. Detection Space Settings

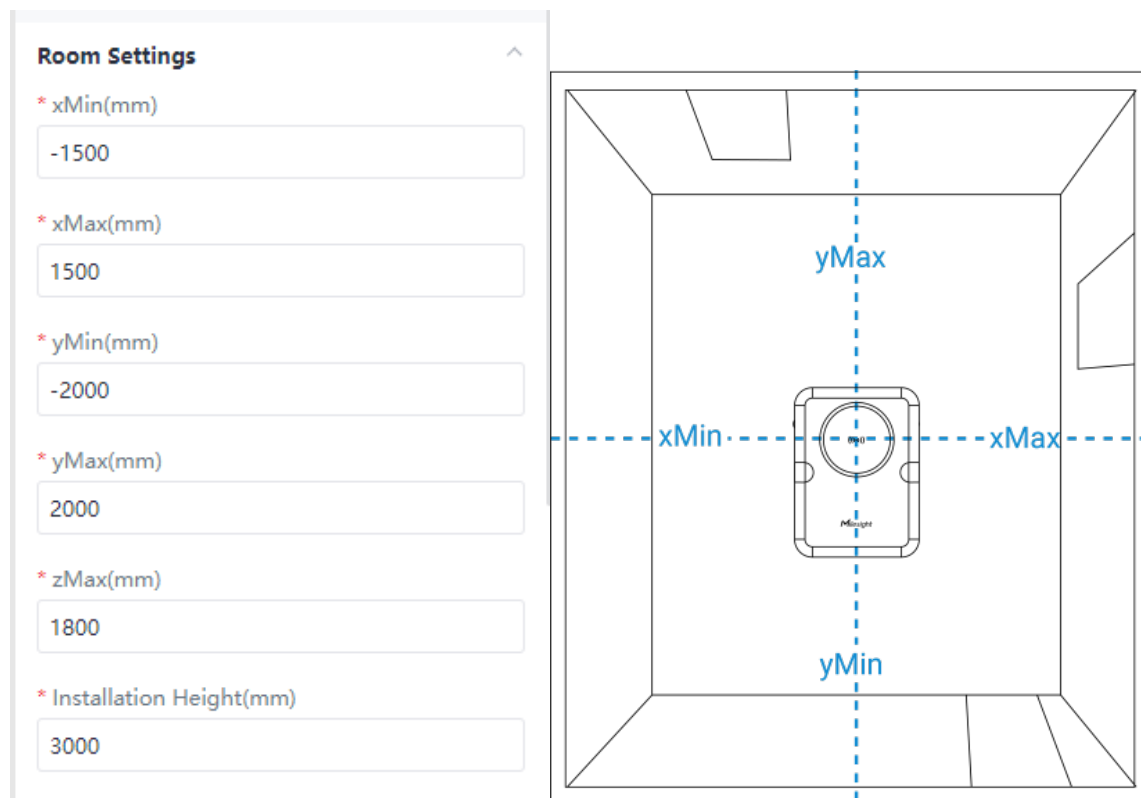

| Parameters | Description |
|---------------------|--|
| xMin/xMax | Corresponding to the short side of the detection space, since the maximum detection width of the device is 4m, the maximum value is $\pm 2000\text{mm}$. |
| yMin/yMax | Corresponding to the long side of the detection space, since the maximum detection width of the device is 5m, the maximum value is $\pm 2500\text{mm}$. |
| zMax | Corresponding to the height of the detection space. Assuming a ceiling fan is located 2.8 meters within the detection space, set zMax to 2500 mm to exclude interference from the ceiling fan. |
| Installation Height | Installation height of the device. |

Configuring Targets Detection Parameters

After setting the detection space size, scroll down to **Advance Settings** to configure the target appearance and disappearance timing parameters.

The screenshot shows a mobile application interface for configuring a 'Rule'. At the top, there's a blue header with a menu icon and the title 'Rule'. Below the header are three tabs: 'Information', 'General Settings' (which is selected), and 'Sub Regions'. The main content area is divided into sections. The 'Advanced Settings' section is expanded, showing several input fields. The 'Targets Detection' section is highlighted with a red rectangular box. Inside this box, there are two settings: '* Presence Confirmation Time(s)' with a text input field containing the number '3', and '* Absence Confirmation Time(s)' with a text input field containing the number '5'. Below the 'Targets Detection' section, there is a large blue button labeled 'Apply'.

| Parameters | Description |
|-------------------------------|---|
| Presence Confirmation Time(s) | When the target appearance time reaches this value, it is recognized as present in the detection space. |
| Absence Confirmation Time(s) | When the target disappearance time reaches this value, the target is recognized as having disappeared from the detection space. |

Configure General Settings

This chapter describes the features supported by the device throughout the entire detection space, which include:


- Fall Alarm
- Lying Alarm
- Dwell Alarm
- Motionless Alarm
- Sleep Detection

Fall Alarm

The device provides fall detection with alarm reporting capability. In multi-person environments, an alarm is triggered only when one person falls and the others remain incapacitated.

Before configuring, you need to understand the different stages of fall detection:

Figure 2. Fall Detection Process

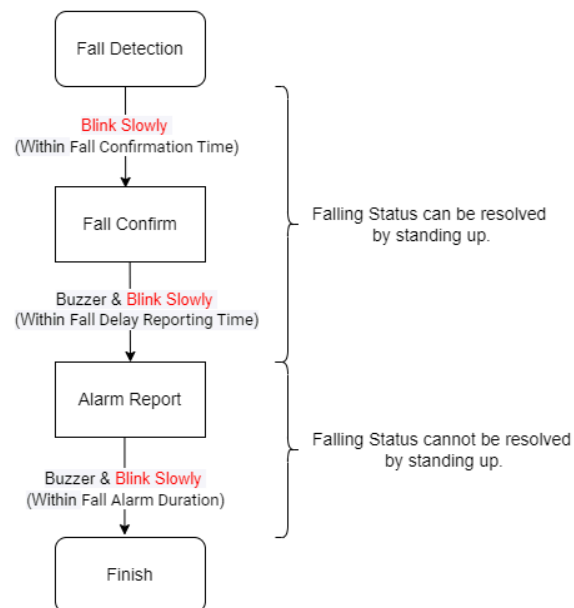

Stage 1:

Someone has entered the room and walked around for over 20 seconds. Suddenly, a fall occurs. A change in target altitude is detected. The red light blinks slowly for the duration set by **Fall Confirmation Time**. The alarm can be canceled at this stage if the person stands up.

Stage 2:

The fall event is confirmed. The LED will blink red quickly and the buzzer start sounding for a duration that depends on the **Fall Delay Reporting Time**. The alarm can be canceled at this stage by standing. Alarm data is not reported at this stage but will appear on the **<Information>** page.

Stage 3:

An alarm message will be reported. The LED will still blink red quickly and the buzzer will sound for a duration that depends on the **Fall Alarm Duration**. The alarm cannot be canceled by standing up but can be resolved by clicking the **Handle** button on the **<Information>** page.


Steps to configure the fall alarm:

Step 1: Ensure that you have completed [room setting](#).

Step 2: Go to **<General Settings>**, click **<Parameters>**, scroll to find the **Fall Alarm**, set [Fall Parameters](#).

Table 1. Fall Parameters

| Parameters | Description |
|------------------------|--|
| Fall Confirmation Time | When the device detects the target falling and this condition persists for the specified duration, it will judge this to be a fall event. Default: 50s, Range: 0~300s. |

| Parameters | Description |
|---------------------------|---|
| |  Note: It is recommended to set the confirmation time between 30s~60s, as setting it below the time may reduce detection accuracy. |
| Fall Delay Reporting Time | When the duration of the fall event reaches this value, an alarm will be reported. Default: 40s, Range: 0~300s. |
| Fall Alarm Duration | The duration for which the alarm and buzzer will sound. Default: 30s, Range: 0~1800s. |

Step 3 (Alternative): Scroll to find Advanced Settings, adjust [Fall Advanced Settings](#) as need.

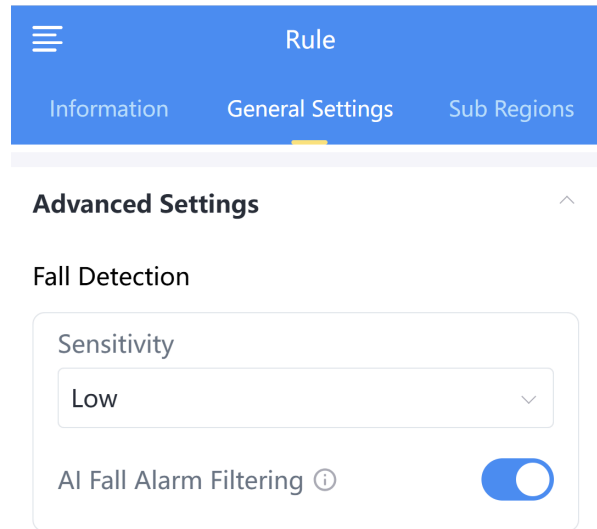




Table 2. Fall Advanced Settings

| Parameters | Description |
|-------------|---|
| Sensitivity | <p>The radar's ability to detect and identify targets.</p> <p>Low: Select to reduce false alarms when there are more interfering objects in the detection space or when the environment is more complex.</p> <p>High: Select when there are fewer interfering objects in the detection space and accurate detection of smaller or more distant targets is required.</p> <p>Medium: Select between the two options above according to your environment.</p> |

| Parameters | Description |
|-------------------------|--|
| |  Note: If you are unsure how to make a selection, please contact Milesight sales representative for assistance. |
| AI Fall Alarm Filtering | When enabled, this feature performs secondary fall detection, reducing false alarms but possibly increasing missed detections.  Note: It is recommended to use this function only in complex environments with frequent false fall alarms (such as bathrooms and washrooms). For regular open areas like bedrooms, it is not recommended to enable this feature, as it may affect the detection and reporting of actual fall events. |


Step 4: After complete configuration, click **Apply** to save the settings.

Please wait 1~2 minutes; the device will automatically restart and apply the new settings.

Step 5: When a fall occurs, no one can assist the fallen individual in getting up until the fall alarm has been reported. Navigate to **<Information>**, you can see the target's point displayed on the coordinate axis, and the Fall Alarm.



The alarm will be resolved when the target stands out or manually clicking **Handle** button.

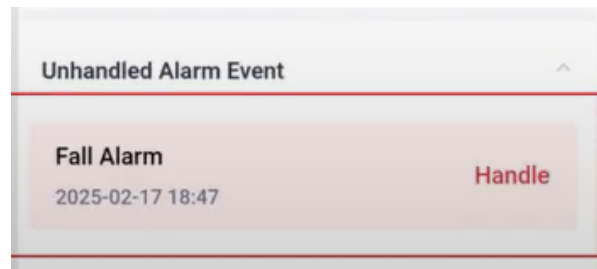

Note:

For persistent detection issues (missed or erroneous) after parameter adjustment, please see troubleshooting.

Lying Alarm

This feature detects specific fall scenarios: if a person falls within 20 seconds of being detected and remains on the ground for 5 minutes, a lying alarm is triggered.

Lying Alarm ⓘ



**Note:**

1. If a fall alarm has been triggered and not resolved, a lying alarm will not be triggered again.
2. This feature is **not** recommended for bathrooms, restrooms, or cluttered areas.
3. If the default lying alarm duration (5 minutes) does not meet your needs, please contact a Milesight sales representative for customization.


Steps to configure the lying alarm:

Step 1: Ensure that you have completed [room setting](#).


Step 2: Switch to **<General Settings>**, enable **Lying Alarm**, then click **Apply** to save the settings.

Please wait 1~2 minutes; the device will automatically restart and apply the new settings.

Step 3: Navigate to **<Information>**, you can see the target's point displayed on the coordinate axis.

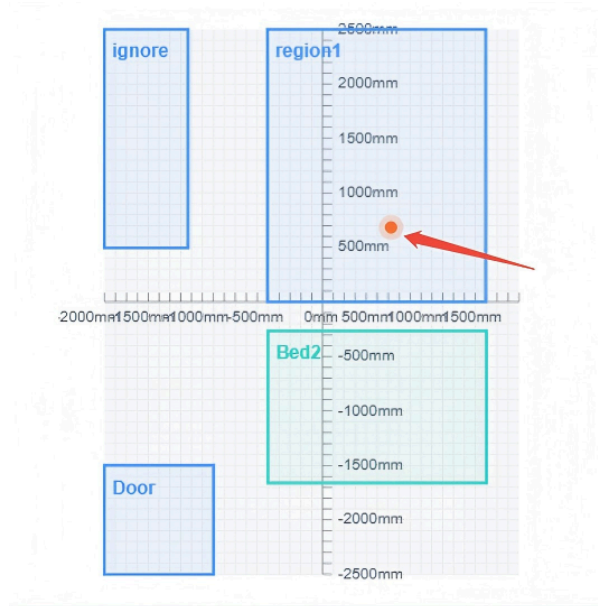

When the target enters the detection space and remains lying for 5 minutes, the device will report an alarm.

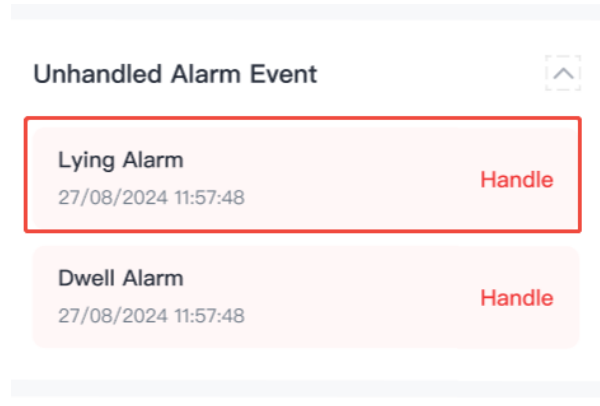

The alarm will be resolved when the target stands out or manually clicking **Handle** button.




Note:

For persistent detection issues (missed or erroneous) after parameter adjustment, please see troubleshooting.

Dwell Alarm

This function detects when a target stays in a specified area beyond the set duration threshold and reports the event automatically.

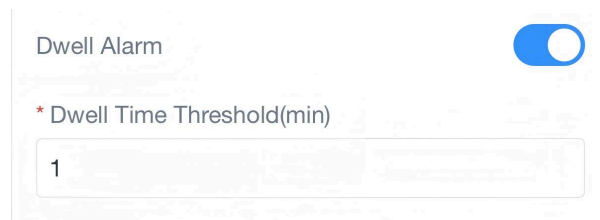

Steps to configure the dwell alarm:


Step 1: Ensure that you have completed [room setting](#).

A [door sub region](#) is required because the radar cannot detect static or departing targets. Instead, a target's presence is inferred from its entry and exit events.


Step 2: Switch to **<General Settings>**, enable **Dwell Alarm**, set **Dwell Time Threshold**, then click **Apply** to save the settings.

Please wait 1~2 minutes; the device will automatically restart and apply the new settings.

Step 3: Navigate to **<Information>**, when the target enters the detection area through the door sub-region, you can see the target's point displayed on the coordinate axis.

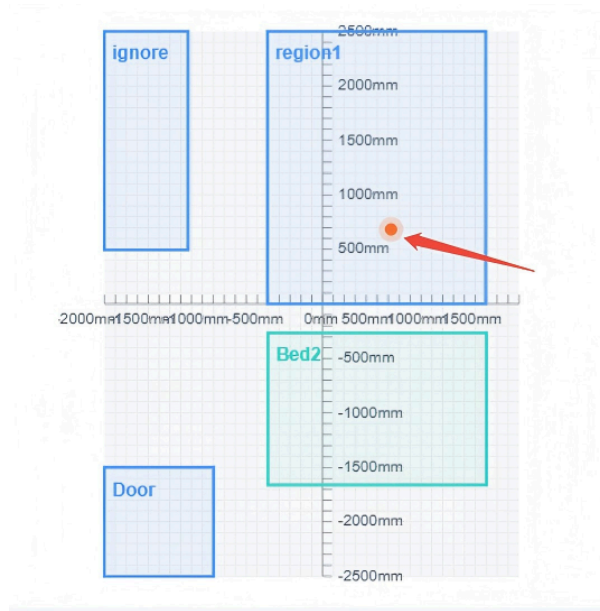

Additionally, an alarm will be triggered if the threshold is exceeded.

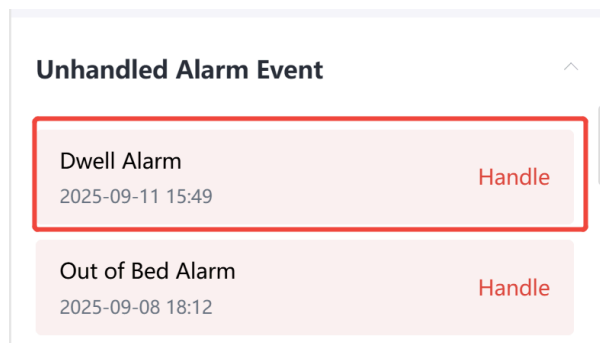

The alarm will be resolved when the target leaves the detection space or manually clicking **Handle** button.



Note:

For persistent detection issues (missed or erroneous) after parameter adjustment, please see troubleshooting.

Motionless Alarm

The motionless alarm is triggered when a target's coordinates remain unchanged for a long period, indicating a possible abnormal condition. This function is suitable for environments with expected frequent movement (e.g., hospital wards, corridors), enabling prompt detection of emergencies or unusual behavior.

Motionless Alarm

* Motionless Time Threshold(min)

5

☒

Steps to configure the motionless alarm:


Step 1: Ensure that you have completed [room setting](#).

A [door sub region](#) is required because the radar cannot detect static or departing targets. Instead, a target's presence is inferred from its entry and exit events.


Step 2: Switch to **<General Settings>**, enable **Motionless Alarm**, set **Motionless Time Threshold**, then click **Apply** to save the settings.

Please wait 1~2 minutes; the device will automatically restart and apply the new settings.

Step 3: Navigate to **<Information>**, when the target enters the detection area through the door sub-region, you can see the target's point displayed on the coordinate axis.

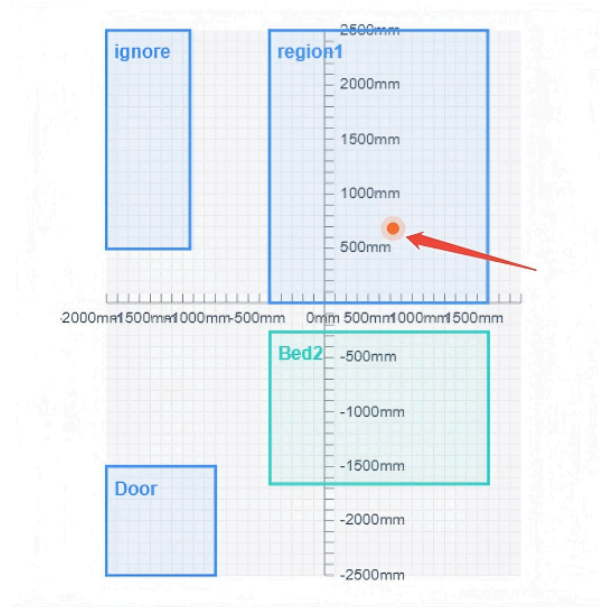

When the target remains stationary at a specific location and the no-movement duration reaches the configured value, the target's point on the coordinate axis turns yellow, and the target status will be displayed as "Motionless".

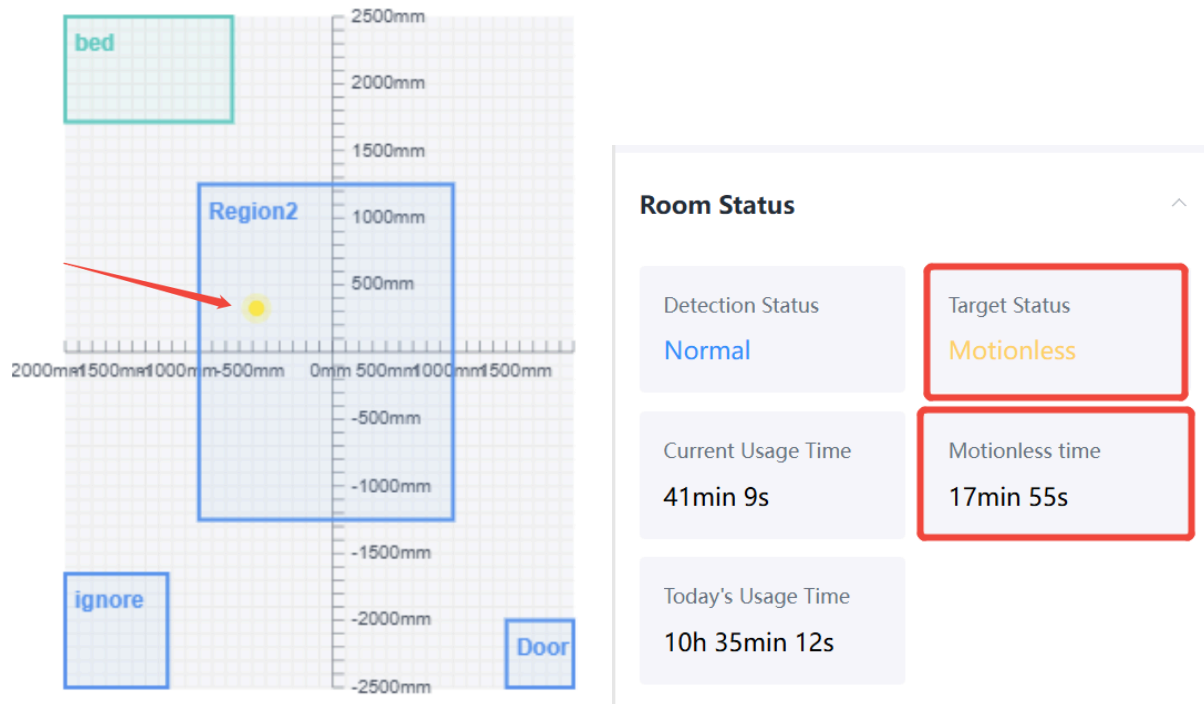

The target status returns to "Normal" when the person resumes walking.



Note:


For persistent detection issues (missed or erroneous) after parameter adjustment, please see troubleshooting.

Sleep Detection

The sleep detection function requires configuration of the "Bed Sub-Region". Please click [Bed Sub-Region](#) to view detailed setup instructions.

Information

After completing the settings, the user can view the following information.

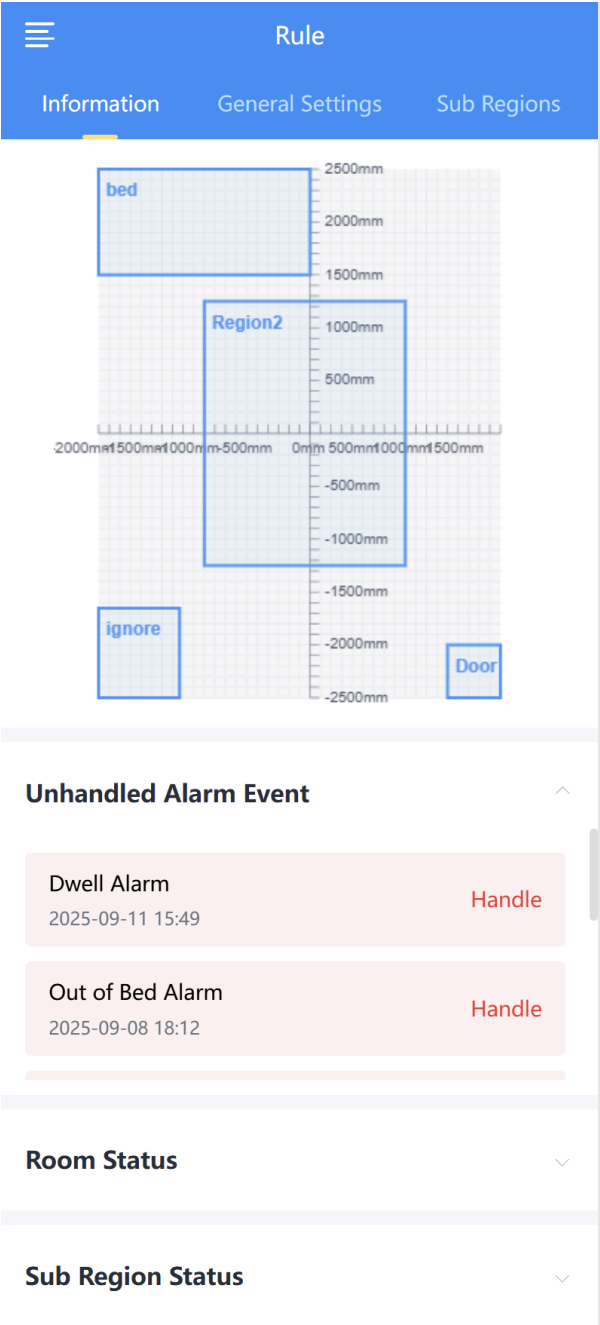



| Parameters | Description | |
|-----------------------|--|--|
| Coordinate Axis | Displays all the sub regions and the location of target. | |
| Unhandled Alarm Event | Displays all unresolved alarm messages. | |
| Room Status | Detection Status | Displays the current detection space status. |

| Parameters | Description | |
|-------------------|--|---|
| | | Possible states: "Normal", "Vacant", "Out of Bed", "Fall". |
| | Target Status | Displays the current status of target: "Normal", "Motionless", "Lying". |
| | Motionless time | Displays the motionless time when target status is "Motionless". |
| | Current Usage Time | Duration the detection space has been occupied. |
| | Today's Usage Time | Cumulative occupancy duration for the day (resets daily at 00:00) |
| Sub Region Status | Displays the current status of every sub-region, including "Occupied", "Vacant", "In Bed", "Out of Bed". | |

Configure Sub Regions

The device supports sub-region configuration for precise monitoring or masking of designated areas. Each sub-region's status is reported individually. This chapter describes the following types:


- [Door](#)
- [Bed](#)
- [Custom Region](#)
- [Ignore Region](#)

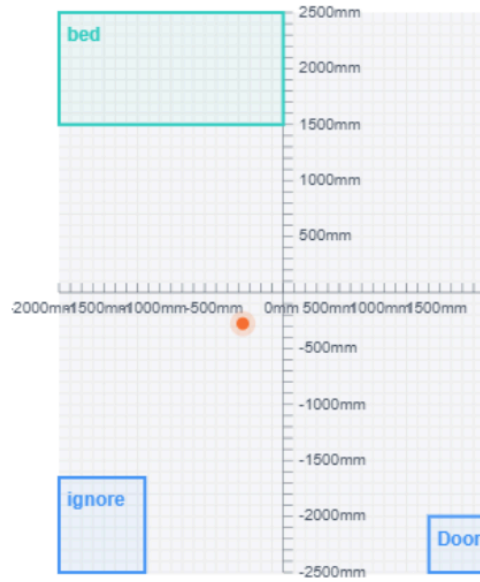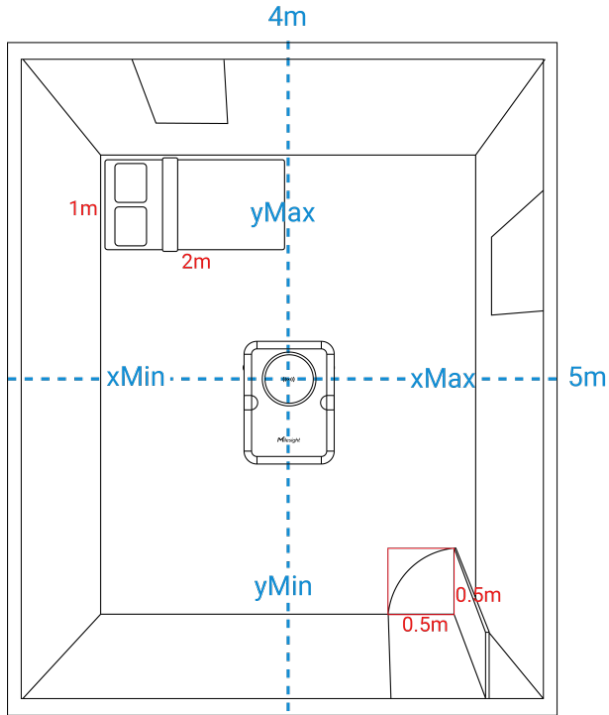

Draw Door Sub-Region

This sub-region enables the device to detect entries and exits of targets. All alarms related to this sub-region are governed by the general system settings.

Step 1: Go to <Sub Region>, click **Add Sub Region**. One device supports to add up to 6 sub regions.

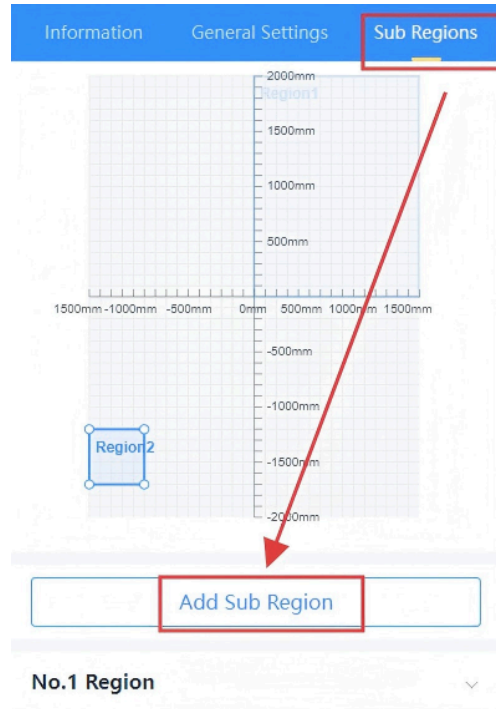


Step 2: Select the region type as **Door**, set the name, width, length, and location of the door according actual information, you can also adjust these parameters by dragging or zooming the region in the view above.

Step 3: Click **Apply** to save configuration.

Please wait 1~2 minutes; the device will automatically restart and apply the new settings.

Step 4: Navigate to **<Information>**, you can see this subregion and the target's point displayed on the coordinate axis. Scroll down to view the status of this sub-region.

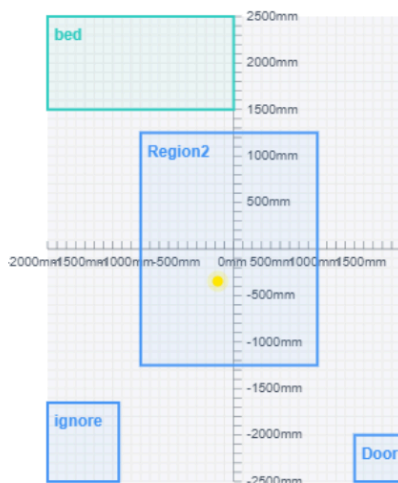

| Sub Region Status | |
|-------------------|----------|
| bed | Region2 |
| Out of Bed | Occupied |
| Door | ignore |
| Vacant | Vacant |


**Note:**

For persistent detection issues (missed or erroneous) after parameter adjustment, please see troubleshooting.

Draw Bed Sub-Region

This sub-region defines a monitoring zone around a bed, used to detect when a target leaves the area and to collect health data such as respiratory rate. All alarms related to this sub-region are governed by the general system settings.

Step 1: Go to <Sub Region>, click **Add Sub Region**. One device supports to add up to 6 sub regions.

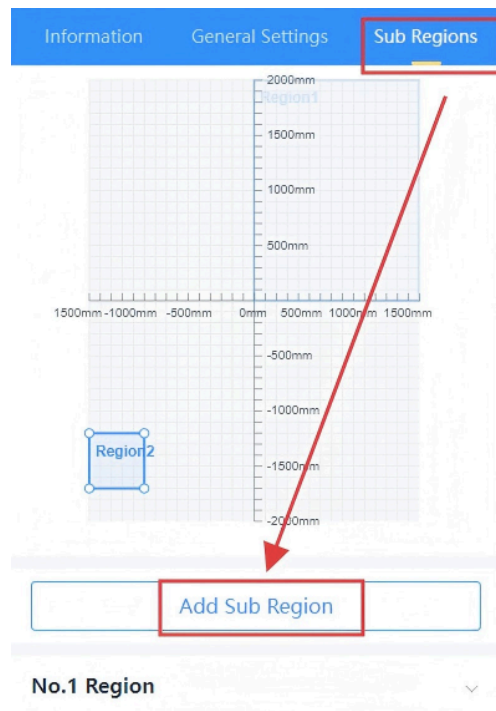

Step 2: Select the region type as **Bed**.

**Note:**

- Only the monitoring bed supports respiratory detection.
- The first added bed is automatically set as the monitoring bed. Any additional bed sub-regions are set as regular beds.
- A maximum of three beds can be configured, each at least 50 cm apart.

Then set the name, width, length, height, and location of beds according actual information, you can also adjust these parameters by dragging or zooming the region in the view above.

Step 3: Click **Apply** to save configuration.

Step 4: Switch to **<General Setting>**, enable **Sleep Detection**, set the sleep period (Both out-of-bed detection and respiratory detection are based on this). You can enable relevant functions and configure the corresponding parameters as needed, or use the default parameters.

The screenshot shows a settings panel with the following options:

- Sleep Detection**: Enabled (toggle switch).
- Sleep Detection Period**: A time range selector showing 18:00 to 08:00 with a clock icon for editing.
- Out of Bed Alarm**: Enabled (toggle switch).
- * Out of Bed Time Threshold(min)**: A numeric input field set to 30.
- Respiratory Detection ⓘ**: Enabled (toggle switch).
- * Respiratory Range**: A range selector showing 12 BPM to 20 BPM.

Please wait 1~2 minutes; the device will automatically restart and apply the new settings.

Step 5: Navigate to **<Information>**, you can see that the monitoring bed subregion is displayed in green, the regular bed subregion is displayed in blue.



If the target's time away from bed reaches the threshold during the sleep period, an alarm will be reported.

| Unhandled Alarm Event | | |
|-----------------------|------------------|--------|
| Dwell Alarm | 2025-09-11 15:49 | Handle |
| Out of Bed Alarm | 2025-09-08 18:12 | Handle |

Additionally, the target's respiratory status and subregion status are displayed.

Respiratory Status

Respiratory Status: -

Respiratory Rate: -

Sub Region Status

monitoring bed: In Bed

Bed2: Out of Bed

Door: Vacant

ignore: Vacant

| Parameters | Description |
|--------------------|--|
| Respiratory Status | When no data is entered, when no monitoring bed is present, or when the monitoring bed has no target, display "-"; When a monitored bed is detected with the target present on the bed, Respiratory Status displays "Normal", "Bradycardia", "Tachypnea" or "Unable Detect", and Respiratory Rate is shown in bpm. |
| Sub Region Status | Display the name and status of the subregion. When the target is in bed, display "In Bed"; when the target is out of bed, display "Out of Bed". |


**Note:**

For persistent detection issues (missed or erroneous) after parameter adjustment, please see troubleshooting.

Draw Custom Sub-Region

This sub-region is user-defined, allowing focused monitoring of specific areas (e.g., a sofa). Detection can be independently enabled or disabled, with customizable parameters to suit application needs.

Step 1: Go to <Sub Region>, click **Add Sub Region**. One device supports to add up to 6 sub regions.

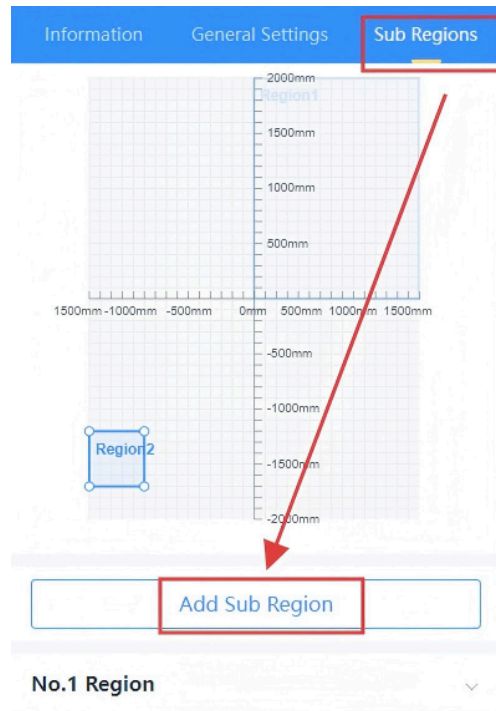

Step 2: Select the region type as **Custom**, set the name, width, length, height, and location of sub-region according actual information, you can also adjust these parameters by dragging or zooming the region in the view above.


Step 3: Select the alarm notification set for this sub-region.

| | |
|---|-------------------------------------|
| Fall Alarm | <input checked="" type="checkbox"/> |
| Lying Alarm | <input type="checkbox"/> |
| Dwell Alarm | <input checked="" type="checkbox"/> |
| Motionless Alarm | <input checked="" type="checkbox"/> |
| <div> Delete Apply </div> | |

Step 4: Click **Apply** to save configuration.

Please wait 1~2 minutes; the device will automatically restart and apply the new settings.

Step 5: Navigate to **<Information>**, you can see this subregion and the target's point displayed on the coordinate axis. Scroll down to view the status of this sub-region.

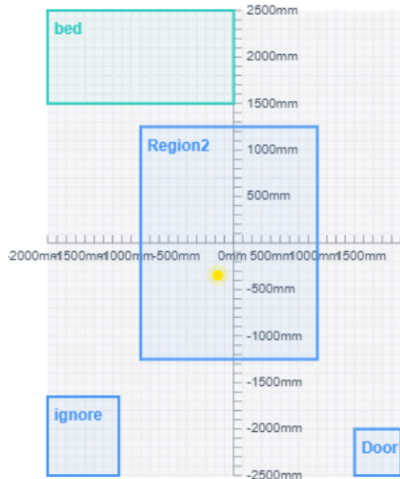

| Sub Region Status | |
|-------------------|---------------------|
| bed Out of Bed | Region2 Occupied |
| Door Vacant | ignore Vacant |




Note:

For persistent detection issues (missed or erroneous) after parameter adjustment, please see troubleshooting.

Draw Ignore Sub-Region

This sub-region maintains detection capability while suppressing all alarm triggers within its boundaries. It is useful for areas with interfering objects (e.g., ceiling fans, moving decorations) to reduce false alarms.

Step 1: Go to <Sub Region>, click **Add Sub Region**. One device supports to add up to 6 sub regions.

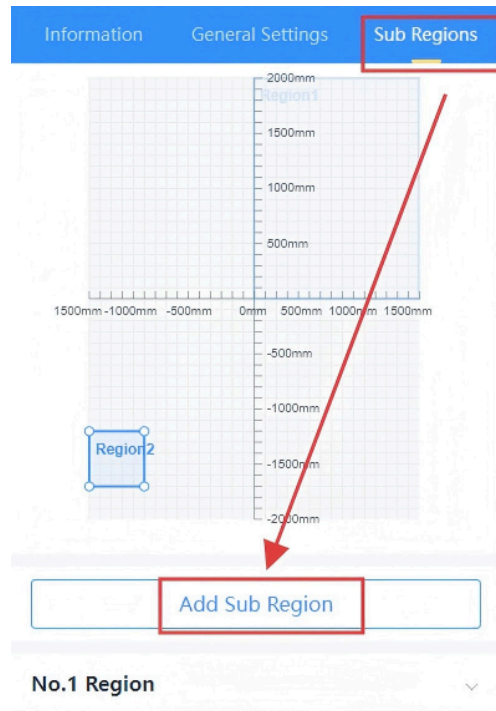


Step 2: Select the region type as **Ignore**, set the name, width, length, height, and location of sub-region according actual information, you can also adjust these parameters by dragging or zooming the region in the view above.

Step 3: Click **Apply** to save configuration.

Please wait 1~2 minutes; the device will automatically restart and apply the new settings.

Step 4: Navigate to **<Information>**, you can see this subregion and the target's point displayed on the coordinate axis. Scroll down to view the status of this sub-region.

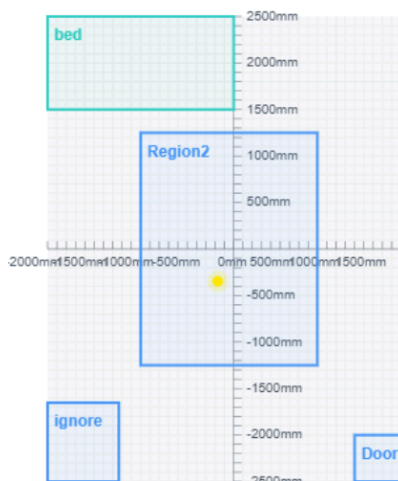

| Sub Region Status | |
|-------------------|----------|
| bed | Region2 |
| Out of Bed | Occupied |
| Door | ignore |
| Vacant | Vacant |

**Note:**

For persistent detection issues (missed or erroneous) after parameter adjustment, please see troubleshooting.

Configure Hardware Settings

This device is equipped with an LED indicator, a buzzer, and a DO (digital output) interface for device status display and alarm notifications.

Hardware Settings

LED

☒

Buzzer

☒

Digital Output

☒

☒ Fall Alarm

☒ Lying Alarm

☐ Out of Bed Alarm

☐ Dwell Alarm

☐ Motionless Alarm


| Parameters | Description |
|----------------|---|
| LED | Enable or Disable indicator light for fall detection alarm. |
| Buzzer | Enable or Disable buzzer sounding for fall detection alarm. |
| Digital Output | When any of the following selected alarms are triggered, the device will output a level signal. |

| Parameters | Description |
|------------|--|
| | <p>When multiple alarms are triggered, priority is: Fall > Lying > Out of Bed > Dwell > Motionless. If a higher-priority alarm is triggered while a lower-priority alarm is still being processed, the device will interrupt the lower-priority alarm and give precedence to reporting and outputting the higher-priority alarm signal.</p> <p>Fall alarm duration = Fall Delay Reporting Time+Fall Alarm Duration, all other alarms last 15s.</p> |


Configure Data Transmission

LoRa

Report Settings

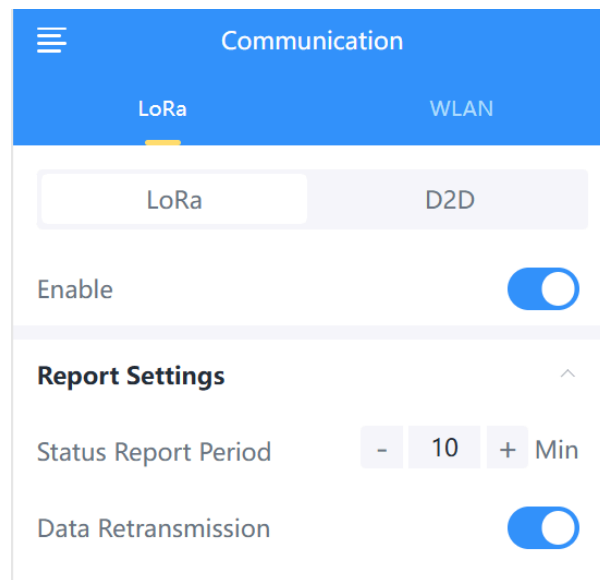

| Parameters | Description |
|----------------------|--|
| Status Report Period | The interval of reporting regional usage and alarm data to network server. Default: 10 min, Range: 1 ~ 1440 min |
| Data Retransmission | When enabled, if the LoRa connection is lost, the device stores data locally and automatically uploads it once the connection is restored. |

| Parameters | Description |
|------------|---|
| |  Note: It is necessary to enable the Rejoin Mode for this feature. |

Trigger Report

Trigger Report

Fall Alarm

Lying Alarm

Out of Bed Alarm

Dwell Alarm

Motionless Alarm

Bradycardia

Tachypnea

Occupied

Vacant

| Parameters | Description |
|------------|--|
| Alarm Type | <p>Enable or disable the reporting of corresponding alarms when they are triggered.</p> <p>For trigger data details, see Uplink Packets.</p> |

LoRaWAN Settings

Configure AppEUI, Join Type, Application Key, and other information. You can also keep all settings by default.

LoRaWAN Settings

LoRa Status

Activated

Device EUI

24E124806E483996

* APP EUI



24E124C0002A0001



* Application Port

85

Join Type

OTAA


| Parameters | Description |
|------------------|---|
| LoRa Status | LoRaWAN [®] network joining status of this device. |
| Device EUI | <p>Unique ID of the device which can be found on the device.</p> <div>  Note: please contact sales for device EUI list if you have many units. </div> |
| App EUI | The default App EUI (join EUI) is 24E124C0002A0001. |
| Application Port | The port used for sending and receiving data, the default port is 85. |
| Device Type | It's fixed as Class C. |
| Join Type | <p>OTAA and ABP mode are available.</p> <div>  Note: it's necessary to select OTAA mode if connecting device to Milesight Development Platform. </div> |

| Parameters | Description |
|------------------------------|---|
| Application Key | <p>Appkey for OTAA mode, default value: "Device EUI" + "Device EUI" (since Q4 of 2025). Example: 24e124123456789024e1241234567890</p> <div>  Note: <ul style="list-style-type: none"> • The default value of earlier devices is 5572404C696E6B4C6F52613230313823. • Please contact sales before purchase if you require random App Keys. </div> |
| Network Session Key | Nwkskey for ABP mode, the default is 5572404C696E6B4C6F52613230313823. |
| Application Session Key | Appskey for ABP mode, the default is 5572404C696E6B4C6F52613230313823. |
| Device Address | DevAddr for ABP mode, default is the 5 th to 12 th digits of SN. |
| Rejoin Mode | <p>Reporting interval ≤ 35 mins: the device will send a specific number of LinkCheckReq MAC packets to the network server every reporting interval or every double reporting interval to validate connectivity; If there is no response, the device will re-join the network.</p> <p>Reporting interval > 35 mins: the device will send a specific number of LinkCheckReq MAC packets to the network server every reporting interval to validate connectivity; If there is no response, the device will re-join the network.</p> <div>  Note: <ol style="list-style-type: none"> 1. Only OTAA mode supports rejoin mode. 2. The actual sending number is Set the number of packets sent + 1. </div> |
| LoRaWAN [®] Version | V1.0.2 and V1.0.3 are available. |

| Parameters | Description |
|---------------------|---|
| Supported Frequency | <p>Enable or disable the frequency to send uplinks. If frequency is one of CN470/AU915/US915, enter the index of the channel to enable in the input box, making them separated by commas.</p> <p>Examples:</p> <p>1, 40: Enabling Channel 1 and Channel 40</p> <p>1-40: Enabling Channel 1 to Channel 40</p> <p>1-40, 60: Enabling Channel 1 to Channel 40 and Channel 60</p> <p>All: Enabling all channels</p> <p>Null: Indicate that all channels are disabled</p> |
| RX2 Data Rate | RX2 data rate to receive downlinks. |
| RX2 Frequency | RX2 frequency to receive downlinks. Unit: MHz |
| Spreading Factor | If ADR mode is disabled, the device will send uplink data following this SF parameter. The higher the spreading factor, the longer the transmission distance, the slower the transmission speed and the more the consumption. |
| Tx Power | Tx power (transmit power) refers to the strength of the outgoing signal transmitted by the device. This is defined by LoRa alliance. |
| Confirmed Mode | If the device does not receive ACK packet from network server, it will resend data once. |
| ADR Mode | Enable or disable network server to adjust Spreading Factor, Bandwidth and Tx Power to optimize data rates, airtime and energy consumption in the network. |

Milesight D2D

Milesight D2D protocol is developed by Milesight and used for connections among Milesight devices without a gateway reducing latency and achieving quick control.

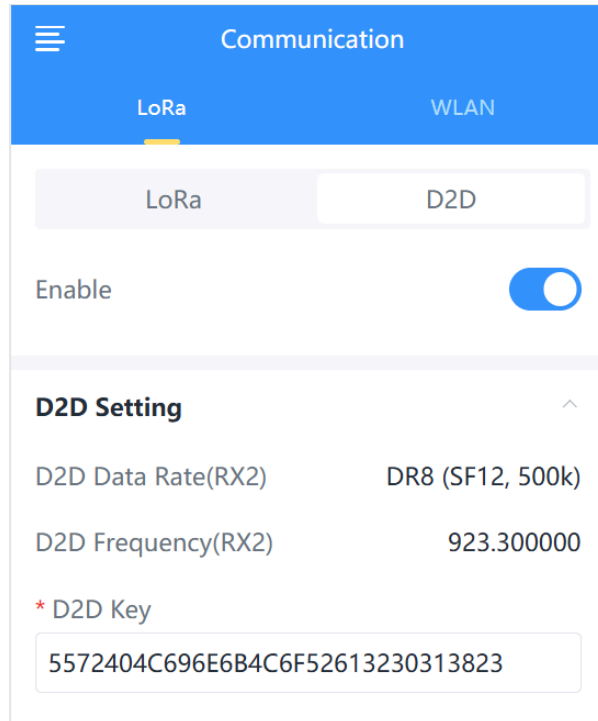

The screenshot shows the 'Communication' settings page with the 'LoRa' tab selected. Below the tabs, there are two buttons: 'LoRa' and 'D2D'. The 'D2D' button is highlighted. Below these buttons is an 'Enable' toggle switch, which is turned on. Under the 'D2D Setting' section, there are two rows: 'D2D Data Rate(RX2)' set to 'DR8 (SF12, 500k)' and 'D2D Frequency(RX2)' set to '923.300000'. Below these is a red asterisk followed by 'D2D Key' and a text input field containing the value '5572404C696E6B4C6F52613230313823'.

Milesight D2D Controller


Step 1: Go to **General Settings** page to enable and configure alarm parameters.

Step 2: Configure the RX2 datarate and RX2 frequency.



Note:

It is suggested to change the default values if there are many LoRaWAN[®] devices around.

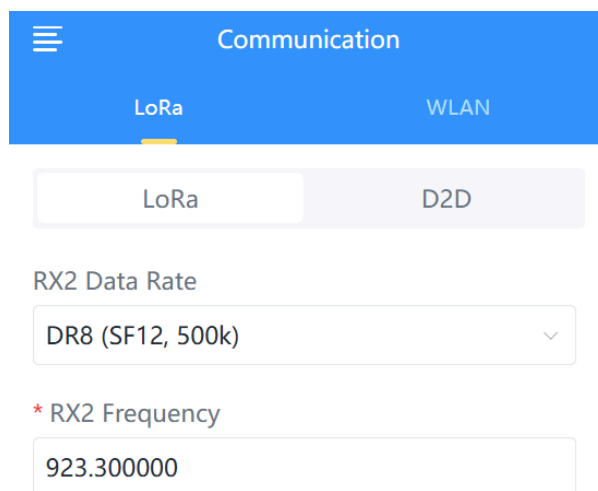

The screenshot shows the 'Communication' settings page with the 'LoRa' tab selected. Below the tabs, there are two buttons: 'LoRa' and 'D2D'. The 'LoRa' button is highlighted. Below these buttons, there is a section for 'RX2 Data Rate' with a dropdown menu showing 'DR8 (SF12, 500k)'. Below this is a red asterisk followed by 'RX2 Frequency' and a text input field containing the value '923.300000'.

Step 3: Enable Milesight D2D feature and define a unique D2D key that is the same as Milesight D2D agent devices. (Default D2D key: 5572404C696E6B4C6F52613230313823)

The screenshot shows the 'Communication' settings page. At the top, there are tabs for 'LoRa' and 'WLAN'. Below these, there are sub-tabs for 'LoRa' and 'D2D'. The 'D2D' sub-tab is active. Under the 'D2D' sub-tab, there is an 'Enable' toggle switch which is turned on. Below this, there is a section titled 'D2D Setting' with a collapse icon. Inside this section, there are three rows of settings: 'D2D Data Rate(RX2)' set to 'DR8 (SF12, 500k)', 'D2D Frequency(RX2)' set to '923.300000', and '* D2D Key' set to '5572404C696E6B4C6F52613230313823'.

Step 4: Enable one of statuses and configure 2-byte hexadecimal Milesight D2D command.



Note:

After enabling the **Control Time**, Milesight D2D agent devices will take corresponding actions within this duration after receiving commands from Milesight D2D controller. This feature is currently under development for Milesight D2D agent devices.

Example

When motionless alarm is triggered, VS373 will send a D2D command 0004 to trigger the Milesight D2D agent devices to take actions within 5 minutes.

D2D Controller Settings ^

Occupied

☐

Vacant

☐

Fall Alarm

☐

Out of Bed Alarm

☐

Dwell Alarm

☐

Motionless Alarm

☒

* Control Command

Control Time(min)


☒

* Input time(min)

Milesight D2D Agent

When D2D setting is enabled, VS373 can work as a Milesight D2D agent device to receive commands from Milesight D2D controller devices.

Step 1: Ensure the RX2 datarate and RX2 frequency in LoRaWAN settings are the same as the D2D controller devices.

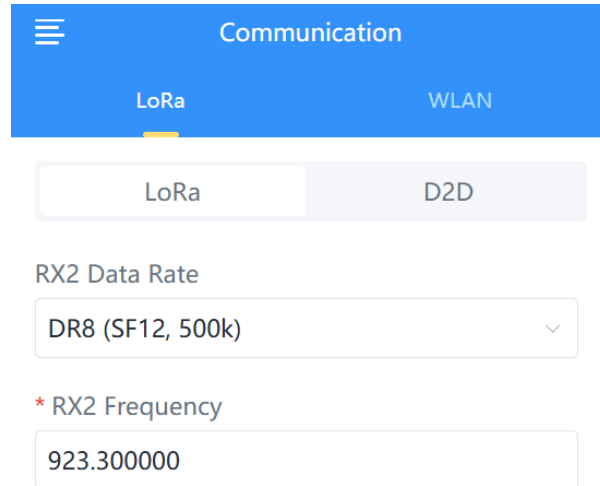

Communication

LoRa WLAN

LoRa D2D


RX2 Data Rate

DR8 (SF12, 500k)

* RX2 Frequency

923.300000

Step 2: Enable Milesight D2D feature and define an unique D2D key which is the same as Milesight D2D controller devices. (Default D2D key: 5572404C696E6B4C6F52613230313823)

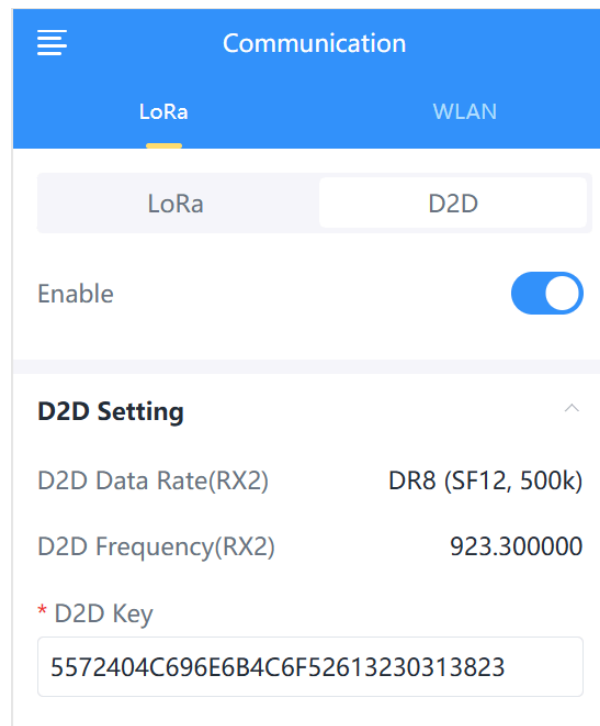

Communication

LoRa WLAN

LoRa D2D

Enable

D2D Setting

D2D Data Rate(RX2) DR8 (SF12, 500k)

D2D Frequency(RX2) 923.300000

* D2D Key

5572404C696E6B4C6F52613230313823

Step 3: Define different 2-byte hexadecimal control commands (0x0000 to 0xffff) and command actions. Up to 3 actions can be added.

Example

After receiving D2D command 0x1510 from Milesight D2D controller devices, the VS373 will trigger the multi-function button to enable Wi-Fi.

D2D Agent Settings

* Control Command

1510

* Action Object

Multi-function Button

* Action Event


Enable Wi-Fi

Continue to add(1/3)

WLAN

Scan

The device scans for nearby 2.4GHz Wi-Fi networks and connects to to the selected network.

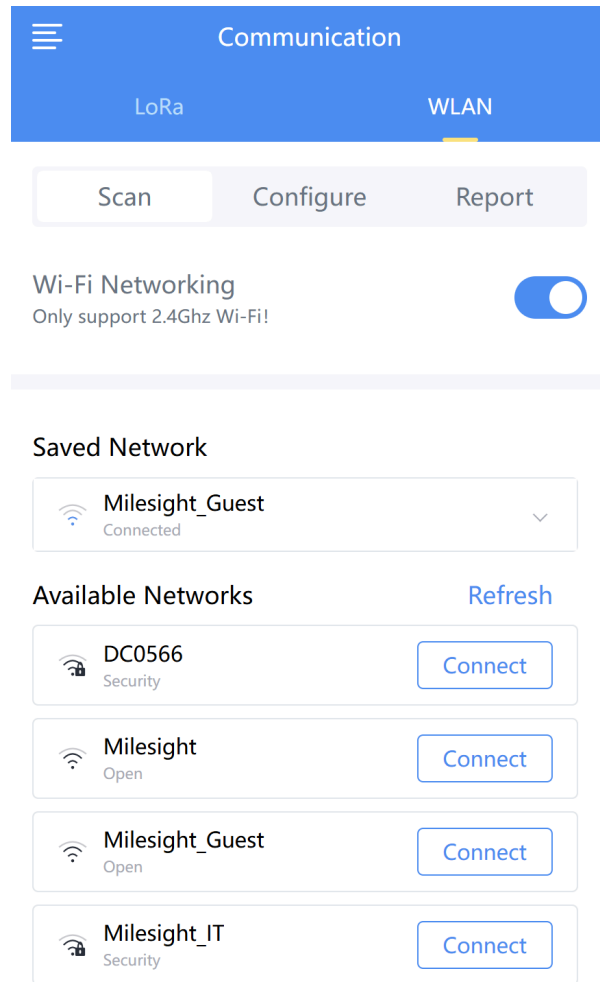

To connect, enable the **Wi-Fi networking** to scan for available networks. Select your preferred network, click **Connect**, and enter the password to join.

Configure

Modify the device's own WLAN settings.

WLAN Setting

Enable

* Wi-Fi SSID

Fall Detection_XXXXXX

* WLAN IP Address

192.168.1.1

Wi-Fi Password

* Password

Please Input

Hide Wi-Fi

Hide this Wi-Fi so it can only be connected to manually


| Parameters | Description |
|-----------------|--|
| Enable | Enable or disable Wi-Fi feature. This can also be turned on/off via multi-function button. |
| Wi-Fi SSID | The unique name for this device Wi-Fi access point, defined as Fall Detection_xxxxxx (can be found on the device label). |
| WLAN IP Address | Configure WLAN IP address for web access, the default IP address is 192.168.1.1. |
| Wi-Fi Password | Customize the password when security mode is not No Encryption. |
| Hide Wi-Fi | Hide this Wi-Fi to prevent discovery. The SSID must then be entered manually to connect. |

Report

This section covers various settings related to Wi-Fi data transmission and reporting. Please ensure that you are connected a Wi-Fi network .

| Parameters | Description |
|---------------------------|-------------|
| Recipient Settings | |

| Parameters | Description |
|------------------------|--|
| Report Protocol | MQTT or HTTP is optional. |
| Connect Status | Connected or Disconnected. |
| URL/Host | The host of HTTP server or MQTT broker. |
| Client ID | Client ID is the unique identity of the client to the server. It must be unique when all clients are connected to the same server, and it is the key to handle messages at QoS 1 and 2. |
| User Name | The username used for connecting to the HTTP server or MQTT broker. |
| Password | The password used for connecting to the HTTP server or MQTT broker. |
| Topic | Topic name used for publishing. |
| QoS | QoS0, QoS1, and QoS2 are optional |
| TLS | Enable the TLS encryption in MQTT communication. |
| Certificate Type | <p>CA Signed Server or Self Signed is optional.</p> <p>CA Signed Server: verifying with the certificate issued by Certificate Authority (CA) that is pre-loaded on the device. Supported file formats for import include [.crt] and [.pem].</p> <p>Self Signed: upload the custom CA certificates, client certificates and secret key for verification. Supported file formats for import include [.crt] and [.pem].</p> |
| Report Settings | |
| Status Report Period | <p>The interval of period reporting.</p> <p>Periodic data information please see Periodic Report.</p> |
| Data Retransmission | Enable to resend stored data packets from the disconnected period when the device's network connection is restored. The device supports to store 1,000 pieces of data at most. |

| Parameters | Description |
|--|--|
| | <div>  Note: <ol style="list-style-type: none"> 1. When this feature is disabled, the existing retransmission data will be cleared. 2. Switching protocols or modifying URL and topic does not require clearing retransmitted data. 3. The historical data format is different from regular reports. </div> |
| Trigger Report | |
| <p>Trigger the following events to immediately report and alarm: Fall Alarm, Lying Alarm, Out of Bed Alarm, Dwell Alarm, Motionless Alarm, Bradycardia, Tachypnea, Occupied, Vacant</p> <p>Trigger data information please see Trigger Report.</p> | |

System Settings

Device

Device Info

All information about the hardware and software can be checked on this page.

| | |
|------------------|-------------------|
| Device Info | |
| Model | VS373-868M |
| SN | 6806E48399660001 |
| Software Version | V_373.1.0.1-b |
| Hardware Version | V1.0 |
| MAC Address | 24:E1:24:88:27:66 |

Synchronize Time

Synchronize Time

Device Time 27/12/2024 14:14:02

Time zone

UTC+8:00 China Standard Time (CT/CST) ▼

Synchronize Mode

☒ Gateway Timing ☐ Manual Timing

| Parameters | Description |
|------------------|--|
| Device Time | Display the current time. |
| Time Zone | Choose the current time zone. |
| Synchronize Mode | <p>Gateway Timing: Synchronize the system time with embedded network server of Milesight gateway when LoRaWAN[®] version is 1.0.3. The device will sync the time with gateway once per day or every time re-joining the network.</p> <p>Manual Timing: Choose to automatically synchronize with the browser time or manually set the time.</p> <p>NTP Timing: Synchronize the system time with NTP server. Fill in NTP server address and set the interval to sync time.</p> |





User

User Info ▼

Securit Question ▼

| Parameters | Description |
|------------|---|
| User Info | You can change the login password of this device. |

| Parameters | Description |
|-------------------|---|
| | <div data-bbox="623 268 1219 1150"> <p>User Info ^</p> <p>User Name</p> <input data-bbox="646 394 1193 453" type="text" value="admin"/> <p>* Old Password</p> <input data-bbox="646 527 1193 585" type="text" value="Please Input"/> <p>* New Password</p> <input data-bbox="646 659 1193 718" type="text" value="Please Input"/> <p>* Confirm Password</p> <input data-bbox="646 791 1193 850" type="text" value="Please Input"/> <p>At least:</p> <ul style="list-style-type: none"> • 8 characters • 2 types of characters: Number, letter and symbol <div data-bbox="646 1056 1193 1115"> Save </div> </div> |
| Security Question | Click to set three security questions for your device. In case that you forget the password, you can click Forget Password button on login page to reset the password by correctly answering three security questions correctly. |

| Parameters | Description |
|------------|---|
| | <div><div>Securit Question </div><div><div>Already Set</div><div><div>* Password</div><div>Please Input</div></div><div><div>Security Question 1</div><div>What is your lucky number? </div></div><div><div>* Answer 1</div><div>Please Input</div></div><div><div>Security Question 2</div><div>What is your favorite sport? </div></div><div><div>* Answer 2</div><div>Please Input</div></div><div><div>Security Question 3</div><div>What is your favorite color? </div></div><div><div>* Answer 3</div><div>Please Input</div></div></div></div> |

Maintenance

Data

Historical Data


Reset


Basic Configuration Reset

Factory Data Reset

Reboot

Reboot the Device

| Parameters | Description | | | | | | | | | | | | |
|------------------|---|--------------|------------|--------------|------------------|-------------|---------|------------------|-------------|---------|------------------|-------------|-----------|
| Data | <p>Click to select the data time range and view the historical data. Choose Export to export data. The maximum export data period is 14 days.</p> <div><div><Log</div><div>2024-12-13 14:49 – 2024-12-27 14:49 </div><table><thead><tr><th>Alarm Time</th><th>Alarm Type</th><th>Alarm Status</th></tr></thead><tbody><tr><td>2024-12-25 11:40</td><td>Dwell Alarm</td><td>Ignored</td></tr><tr><td>2024-12-26 13:59</td><td>Dwell Alarm</td><td>Ignored</td></tr><tr><td>2024-12-26 16:37</td><td>Dwell Alarm</td><td>Unhandled</td></tr></tbody></table></div> | Alarm Time | Alarm Type | Alarm Status | 2024-12-25 11:40 | Dwell Alarm | Ignored | 2024-12-26 13:59 | Dwell Alarm | Ignored | 2024-12-26 16:37 | Dwell Alarm | Unhandled |
| Alarm Time | Alarm Type | Alarm Status | | | | | | | | | | | |
| 2024-12-25 11:40 | Dwell Alarm | Ignored | | | | | | | | | | | |
| 2024-12-26 13:59 | Dwell Alarm | Ignored | | | | | | | | | | | |
| 2024-12-26 16:37 | Dwell Alarm | Unhandled | | | | | | | | | | | |
| Reset | <p>Basic Configuration Reset: keep the IP settings and user information when resetting.</p> <p>Factory Data Reset: reset device to factory default, requiring admin password verification</p> | | | | | | | | | | | | |

| Parameters | Description |
|--------------------|--|
| Reboot | Restart the device immediately. |
| Upgrade | <p>Click Browse and select the upgrading file, then click the Upgrade button to upgrade. The update will be done when the system reboots successfully.</p> <div>  Note: The upgrade process takes about 1-3 minutes. Do not turn off the power and complete automatic restart after the upgrade. </div> |
| Backup and Restore | Export Config File: Export configuration file. |
| | Import Config File: Click Browse and select the configuration file, click Import button to import configuration file. |
| Custom Sensitivity | Used to import custom sensitivity files given by Milesight technical support. |
| Diagnostics | Download log files for troubleshooting. |

Chapter 8. Uplink and Downlink(LoRa)

Overview

All messages are based on following format (HEX), the Data field should follow little-endian:

| Channel1 | Type1 | Data1 | Channel2 | Type2 | Data2 | Channel3 | ... |
|----------|--------|---------|----------|--------|---------|----------|-----|
| 1 Byte | 1 Byte | N Bytes | 1 Byte | 1 Byte | N Bytes | 1 Byte | ... |

For decoder examples please find files on <https://github.com/Milesight-IoT/SensorDecoders>.

Uplink Packets

Basic Information

The device will report a basic information packet whenever joining the network.

| Item | Channel | Type | Byte | Description |
|------------------|---------|------|------|---|
| Protocol Version | ff | 01 | 1 | Example: 01=V1 |
| Serial Number | ff | 16 | 8 | 16 digits |
| Hardware Version | ff | 09 | 2 | Example: 03 10 = V3.1 |
| Firmware Version | ff | 0a | 2 | 01 14 => V1.14 |
| Device Type | ff | 0f | 1 | 00: Class A, 01: Class B, 02: Class C, 03: Class C to B |

Example:

| ff0101 ff166806e39739840003 ff090100 ff0a0101 ff0f02 | | |
|--|------|-------------------------------|
| Channel | Type | Value |
| ff | 01 | Protocol Version: 01(V1) |
| ff | 16 | SN: 6824e30817560003 |
| ff | 09 | Hardware Version: 0100 (V1.0) |
| ff | 0a | Firmware Version: 0101(V1.1) |

| ff0101 ff166806e39739840003 ff090100 ff0a0101 ff0f02 | | |
|--|------|--------------------------|
| Channel | Type | Value |
| ff | 0f | Device Type: 02(Class C) |

Periodic Report

The device supports the sensor data according to reporting interval.

| Item | Channel | Type | Byte | Description |
|---|---------|------|------|--|
| Room Status (Firmware V373.1.0.1 Only) | 03 | f8 | 6 | Byte 1: Detection Status, 00-Nomal; 01: Vacant; 02-In-bed; 03-Out of Bed; 04-Fall Byte 2: Target Status, 00-Normal; 01-Motionless; 02-Abnormal Byte 3-4: User Time-Now, Unit: s Byte 5-6: User Time-Today, Unit: s |
| Room Status | 07 | b0 | 8 | Byte 1: Detection Status, 00-Nomal; 01: Vacant; 03-Out of Bed; 04-Fall Byte 2: Target Status, 00-Normal; 01-Motionless; 03-Lying; Byte 3-4: User Time-Now, Unit: s. Length of time this room area was occupied. Start counting from the moment occupancy is detected. Byte 5-6: User Time-Today, Unit: s |
| Respiratory Status | 08 | b1 | 3 | Byte 1: Respiratory Status 01-No data |

| Item | Channel | Type | Byte | Description |
|---|---------|------|------|--|
| | | | | 02-Normal 03-Tachypnea 04-Bradycardia 05-Unable Detect Byte 2-3: Respiratory Rate, UINT16/100, Unit: bpm |
| Sub Region Type | 09 | b2 | 6 | Up to 6 subregions, 00-Custom Region 01-Bed 02-Door 03-Ignore ff-Unset |
| Sub Region Status (Firmware V373.1.0.1 Only) | 04 | f9 | 4 | Byte 1: Sub Region1, 00: Occupied; 01: Vacant Byte 2: Sub Region2, 00: Occupied; 01: Vacant Byte 3: Sub Region3, 00: Occupied; 01: Vacant Byte 4: Sub Region4, 00: Occupied; 01: Vacant |
| Sub Region Status | 0a | b3 | 5 | Byte 1: 06 Byte 2: Bit0-Bit5 Indicates the occupancy status of each subregion. 1: Occupied; 0: Vacant Bit6-Bit7 00 Byte 3-5: 000000 |

| Item | Channel | Type | Byte | Description |
|---|---------|------|------|--|
| Out Of Bed Time (Firmware V373.1.0.1 Only) | 05 | fa | 8 | Byte 1-2: Bed Sub Region1, Unit: s Byte 3-4: Bed Sub Region2, Unit: s Byte 5-6: Bed Sub Region3, Unit: s Byte 7-8: Bed Sub Region4, Unit: s |
| Out Of Bed Time | 0b | b4 | 9 | Byte 1-3: Bed Sub Region1, Unit: s Byte 4-6: Bed Sub Region2, Unit: s Byte 7-9: Bed Sub Region3, Unit: s |
| | 0c | b4 | 9 | Byte 1-3: Bed Sub Region4, Unit: s Byte 4-6: Bed Sub Region5, Unit: s Byte 7-9: Bed Sub Region6, Unit: s |

Examples:

1. Periodic packet(Firmware V373.1.0.1 Only):

| 03f80100e0105046 04f901010101 05fab004000000000000 | | |
|--|------|---|
| Channel | Type | Value |
| 03 | f8 | 01=>Detection Status is Vacant 00=>Target Status is Normal User Time-Now: e010=>10e0=4320s=1h12min User Time-Today: 5046=>4650=18000s=5h |
| 04 | f9 | 01 => Sub Region1 is Vacant 01 => Sub Region2 is Vacant 01 => Sub Region3 is Vacant |

| 03f80100e0105046 04f901010101 05fab004000000000000 | | |
|--|------|---|
| Channel | Type | Value |
| | | 01 => Sub Region4 is Vacant |
| 05 | fa | b004=>04b0=1200s=20min, Bed Sub Region1 |

2. Periodic packet:

| 07b00001e10101ac2600 08b102dc05 09b2000203ffffff 0ab30700000000 | | |
|---|------|---|
| Channel | Type | Value |
| 07 | b0 | 00=>Detection Status is Normal 01=>Target Status is Motionless Current Usage Time: e10101=>0101e1=66017s=18h20min16s Today's Usage Time: ac2600=>0026ac=9900s=2h45min |
| 08 | b1 | Respiratory Status: 02=>Normal Respiratory Rate: dc05=>05dc=>1500/100=15bpm |
| 09 | b2 | 00=>Sub-region 1 type is custom. 02=>Sub-region 2 type is door. 03=>Sub-region 3 type is ignore ff=>Sub-region 4 is unset. ff=>Sub-region 5 is unset. ff=>Sub-region 6 is unset. |
| 0a | b3 | Sub Region Status: 07 =>00000111=> Sub Region 1~3 are Occupied, Sub Region 4~6 are Vacant |

Alarm Report

The device supports to report below types of alarm report packets.

| Item | Channel | Type | Byte | Description |
|-------|---------|------|------|---|
| Alarm | 06 | fb | 5 | <p>Byte 1-2: Random Alarm ID, Range:0-9999, Only Fall/Lying/Dwell/Out of Bed alarms have ID, other alarms ID are fixed to ffff.</p> <p>Byte 3: Alarm Type,</p> <p>00-Fall;</p> <p>01: Motionless;</p> <p>02-Dwell;</p> <p>03-Out of Bed;</p> <p>04-Occupied;</p> <p>05-Vacant</p> <p>06-Bradycardia</p> <p>07-Tachypnea</p> <p>08-Lying</p> <p>Byte 4: 01-Alarm; 02-Resolved; 03-Ignore; 04-Report Respiratory Status</p> <p>Byte 5: Bed Sub Region ID, Only used when Out of Bed or Respiratory Status, other situation is ff.</p> |

Example:

1. Motionless Alarm packet:

| 06fb ffff 01 01 ff | | |
|--------------------|------|------------|
| Channel | Type | Value |
| 06 | fb | ffff => ID |

| 06fb ffff 01 01 ff | | |
|--------------------|------|---------------------------------|
| Channel | Type | Value |
| | | 01 => Motionless 01 => Alarm |

2. Dwell Alarm packet:

| 06fb 1400 0203 ff | | |
|-------------------|------|---|
| Channel | Type | Value |
| 06 | fb | 1400 => ID 02 => Dwell 03 => Ignore |

3. Out of bed Alarm packet:

| 06fb b503 03 01 00 | | |
|--------------------|------|--|
| Channel | Type | Value |
| 06 | fb | b503 => 03b5=949 => Alarm ID 03 => Out of Bed 01 => Alarm 00 => Bed Sub-Region ID |

Historical Data

The device will report retransmission data or stored data as below example.

| Item | Channel | Type | Byte | Description |
|-----------------|---------|------|------|--|
| Historical Data | 20 | ce | 9 | Byte 1-4: Unix Timestamp, Unit: s Byte 5-6: Random ID, Range:0-9999, Fall/Lying/Dwell/Out of Bed is ffff. |

| Item | Channel | Type | Byte | Description |
|------|---------|------|------|---|
| | | | | <p>Byte 7: Alarm Type,</p> <p>00-Fall;</p> <p>01: Motionless;</p> <p>02-Dwell;</p> <p>03-Out of Bed;</p> <p>04-Occupied;</p> <p>05-Vacant</p> <p>06-Bradycardia</p> <p>07-Tachypnea</p> <p>08-Lying</p> <p>Byte 8: 01-Alarm; 02-Resolved; 03-Ignore; 04-Report Respiratory Status</p> <p>Byte 9: Bed Sub Region ID, Only used when Out of Bed or Respiratory Status, other situation is ff.</p> |

Example:

| 20ce 1932ec64 17000203ff | | | |
|--------------------------|------|---------------------------------------|---|
| Channel | Type | Time Stamp | Value |
| 20 | ce | 1932ec64 => 64ec3219 = 1693200921s | <p>1700 => ID</p> <p>02 => Dwell</p> <p>03 => Ignore</p> |

Downlink Commands

The device supports downlink commands to configure the device. Application port is 85 by default.

General Setting

| Item | Channel | Type | Byte | Description |
|----------------------------|---------|------|------|---|
| Reboot | f9 | 10 | 1 | ff |
| LED | ff | 2f | 1 | 01-enable, 00-disable |
| Buzzer | ff | 3e | 1 | 01-enable, 00-disable |
| Release All Alarm | ff | 64 | 1 | ff |
| Single Alarm Handle | f9 | b4 | 3 | Byte 1-2: the alarm ID Byte 3: 02-Resolved; 03-Ignore |
| Reporting Interval | ff | 8e | 3 | Byte 1: 00 Byte 2-3: interval time, unit: min |
| WLAN | ff | 42 | 1 | 01: Enable, 00: Disable |
| Hide Wi-Fi SSID | f9 | 4d | 1 | 01: Enable, 00: Disable |
| Manual system time setting | ff | 11 | 4 | Unix timestamp, Unit:s |
| Synchronize Time | f9 | 91 | 5 | Byte 1: 00-Synchronize With Gateway Time, 01-Manual Byte 2-5: Timestamp, If gateway synchronization is enabled, this value is 00000000 |
| DO level signal | f9 | 4e | 1 | 01: High, 00: Low |
| DO | f9 | b5 | 6 | Byte 1: 01: Enable, 00: Disable Byte 2: Fall Alarm Enable; Fall Alarm Disable Byte 3: Lying Alarm Enable; Lying Alarm Disable Byte 4: Out of Bed Alarm Enable; Out of Bed Alarm Disable Byte 5: Dwell Alarm Enable; Dwell Alarm Disable |

| Item | Channel | Type | Byte | Description |
|------|---------|------|------|---|
| | | | | Byte 6: Motionless Alarm Enable; Motionless Alarm Disable |

Example:

1. Reboot the device.

| |
|--------|
| ff10ff |
|--------|

2. Set report interval as 20 minutes.

| ff8e 00 1400 | | |
|--------------|------|-----------------------|
| Channel | Type | Value |
| ff | 8e | 1400=>0014=20 minutes |

Detection

| Item | Channel | Type | Byte | Description |
|----------------|---------|------|------|--|
| Room Settings | f9 | 4f | 12 | Byte 1-2: xMin, UINT16, Unit: mm Byte 3-4: xMax, UINT16, Unit: mm Byte 5-6: yMin, UINT16, Unit: mm Byte 7-8: yMax, UINT16, Unit: mm Byte 9-10: zMax, UINT16, Unit: mm Byte 11-12: Installation Height, UINT16, Unit: mm |
| Sensitivity | f9 | 50 | 2 | Byte 1: 00 Byte 2: 00-Low; 01-High; 02-Midium; 03-Custom |
| Fall Detection | f9 | 51 | 6 | Byte 1-2: Fall Confirmation Time, UINT16, Unit: s, Range: 0~300 Byte 3-4: Fall Delay Reporting Time, UINT16, Unit: s, Range: 0~300 |

| Item | Channel | Type | Byte | Description |
|-------------------------|---------|------|------|--|
| | | | | Byte 5-6: Fall Alarm Duration, UINT16, Unit: s, Range: 0~1800 |
| Dwell Time Detection | f9 | 52 | 3 | Byte 1: 01-enable, 00-disable Byte 2-3: Dwell Time Threshold, Unit: min |
| Motionless Detection | f9 | 53 | 3 | Byte 1: 01-enable, 00-disable Byte 2: 00 Byte 3: Motionless Time Threshold, Unit: min |
| Sleep Detection | f9 | b1 | 7 | Byte 1: 01-enable, 00-disable Byte 2-3: Start Time, Unit: min Byte 4-5: End Time, Unit: min Byte 6: 01-Enable Out of Bed Alarm; 00-Disable Out of Bed Alarm Byte 7: Out of Bed Time Threshold, Unit: min |
| Respiratory Detection | f9 | b2 | 3 | Byte 1: 01-enable, 00-disable Byte 2: Min. Respiratory Value Byte 3: Max. Respiratory Value |
| AI Fall Alarm Filtering | f9 | b3 | 1 | 01-enable, 00-disable |

Example:

1. Set room size.

| f9 4f e803 d007 30f8 3cf6 0807 c409 | | |
|-------------------------------------|------|---|
| Channel | Type | Value |
| ff | 4f | e803=>03e8=1000=> xMin d007=>07d0=2000=> xMax, |

| f9 4f e803 d007 30f8 3cf6 0807 c409 | | |
|-------------------------------------|------|--|
| Channel | Type | Value |
| | | 30f8=>f820=-2000=> yMin 3cf6=>f63c=-2500=> yMax 0807=>0708=1800=> zMax c409=>09c4=2500=> In- stallation Height is 2.5m |

2. Fall Detection.

| f9 51 3700 2d00 2300 | | |
|----------------------|------|--|
| Channel | Type | Value |
| f9 | 51 | Fall Confirmation Time, 3700=>0037=55s Fall Delay Reporting Time, 2d00=>002d=45s Fall Alarm Duration, 2300=>0023=35s |

Sub Region

| Item | Channel | Type | Byte | Description |
|----------------------|---------|------|------|--|
| Sub Region Size | f9 | 49 | 9 | Byte 1: Sub Region number, Range 0~3 Byte 2-3: xMin, UINT16, Unit: mm Byte 4-5: xMax, UINT16, Unit: mm Byte 6-7: yMin, UINT16, Unit: mm Byte 8-9: yMax, UINT16, Unit: mm |
| Delete Sub Region | f9 | 48 | 1 | Sub Region number, Range 0~3 |
| Sub Region Detection | f9 | 4a | 5 | Byte 1: Sub Region number, Range 0~5 Byte 2: Fall Detection, 01-enable, 00-disable |

| Item | Channel | Type | Byte | Description |
|--|---------|------|------|---|
| | | | | Byte 3: Dwell Detection, 01-enable, 00-disable Byte 4: Motionless Detection, 01-enable, 00-disable Byte 5: Type, 00-Custom, 01-Bed, 02-Door, 03-Ignore |
| In-bed Detection (Firmware V373.1.0.1 Only) | f9 | 4b | 9 | Byte 1: Sub Region number, Range 0~3 Byte 2: In-bed Detection, 01-enable, 00-disable Byte 3-4: Start time, Unix timestamp, Unit: s Byte 5-6: End time, Unix timestamp, Unit: s Byte 7-8: Bed Height, Unit: mm Byte 9: Out of Bed Time Threshold, Unit: min |

Example:

Set Door Sub Region Detection.

| f94a 01 01 01 02 | | |
|------------------|------|--|
| Channel | Type | Value |
| f9 | 4a | 01=> Sub Region number 01=> Enable Fall Detection 01=>Enable Occupancy Detection 01=>Motion Detection 02=>Type is Door |

Advance Setting

| Item | Channel | Type | Byte | Description |
|-------------------|---------|------|------|---|
| Targets Detection | f9 | 56 | 2 | Byte 1: Presence Confirmation Time, Unit: s, Range: 0~60 Byte 2: Absence Confirmation Time, Unit: s, Range: 0~60 |

Example:

Set target presence confirmation time as 3s and absence confirmation time as 5s.

| f9 56 03 05 | | |
|-------------|------|---|
| Channel | Type | Description |
| f9 | 56 | Presence Confirmation Time, 03=3s Absence Confirmation Time, 05=5s |

LoRaWAN[®] Setting

Modifying the following parameters triggers the device to rejoin the network.

| Item | Channel | Type | Byte | Description |
|------------------------|---------|------|------|---|
| LoRa Con- firm Mode | ff | 04 | 1 | 01: Enable, 00: Disable |
| ADR Mode | ff | 40 | 1 | 01: Enable, 00: Disable |
| LoRa Re- join Mode | f9 | 85 | 2 | Byte 1: 01-Enable; 00-Disable Byte 2: The Number of Detection, Range: 4~32 |
| Spreading Factor | f9 | 86 | 1 | 00-SF12, 01-SF11, 02-SF10, 03-SF9, 04-SF8, 05-SF7 |
| TXPower | f9 | 87 | 1 | Range: 0~14 |

Data Retransmission

| Item | Channel | Type | Byte | Description |
|------------------------------|---------|------|------|---|
| Data Retransmission | ff | 69 | 1 | 00: Disable, 01: Enable |
| Data Retransmission Interval | ff | 6a | 3 | Byte 1: 00 Byte 2-3: UINT16, Unit: s, Range: 30~1200, Default: 600 |

Example:

1. Set report interval as 20 minutes.

| ff8e001400 | | |
|------------|------|----------------------|
| Channel | Type | Value |
| ff | 8e | 1400=>0014=20minutes |

Milesight D2D Setting

| Item | Channel | Type | Byte | Description |
|---------------------------|---------|------|------|---|
| D2D Feature | ff | 84 | 1 | 00: Disable, 01: Enable |
| D2D Key | ff | 35 | 8 | The first 16 digits of D2D key, and the last 16 digits are fixed as 0. |
| D2D Settings (controller) | ff | 96 | 8 | Byte 1: 00-Occupied 01-Vacant 02-Fall Alarm 03-Out of bed alarm 04-Motionless Alert 05-Dwell Alarm Byte 2: 01-enable, 00-disable |

| Item | Channel | Type | Byte | Description |
|----------------------|---------|------|------|---|
| | | | | <p>Byte 3: 01-enable LoRa Uplink, 00-disable LoRa Uplink</p> <p>Byte 4-5: D2D control command</p> <p>Byte 6-7: control time, unit: min</p> <p>Byte 8: 00-disable control time, 01-enable control time</p> |
| D2D Settings (agent) | f9 | 4c | 5 | <p>Byte 1: ID, Range: 0~3</p> <p>Byte 2-3: D2D control command</p> <p>Byte 4: Action Object, 01 - Multi-function button, 00-Delete this action</p> <p>Byte 5: Action Event, 00-Release Alarm, 01-Enable Wi-Fi, 02-Disable Wi-Fi</p> |

Example:

1. Set Milesight D2D Key as 12345678123456780000000000000000.

| ff35 1234567812345678 | | |
|-----------------------|------|------------------|
| Channel | Type | Value |
| ff | 35 | 1234567812345678 |

2. Set Milesight D2D controller settings.

| ff96 03 01 01 04e0 0500 01 | | |
|----------------------------|------|--|
| Channel | Type | Value |
| ff | 96 | <p>03=> Out of bed alarm;</p> <p>01=>Enable;</p> <p>01=>Enable LoRa Uplink;</p> |

| ff96 03 01 01 04e0 0500 01 | | |
|----------------------------|------|---|
| Channel | Type | Value |
| | | 04 e0=>e0 04, Control Command is e0 04; 05 00=>00 05, Control time is 5 mins; 01=>Enable Control Time |

Historical Data Enquiry

The device supports data retrievability feature to send downlink command to enquire the historical data stored in the device. Before that, ensure the device time is correct and data storage feature was enabled to store data.

Command Format:

| Item | Channel | Type | Byte | Description |
|----------------------------|---------|------|------|--|
| Enquire Data in Time Point | fd | 6b | 4 | Unix timestamp, Unit: s |
| Enquire Data in Time Range | fd | 6c | 8 | Byte 1-4: Start timestamp, Unit: s Byte 5-8: End timestamp, Unit: s |
| Stop Query Data Report | fd | 6d | 1 | ff |
| Data Retrieval Interval | ff | 6a | 3 | Byte 1: 01 Byte 2-3: UINT16, Unit: s, Range: 30~1200, Default: 60 |

Reply Format:

| Item | Channel | Type | Byte | Description |
|----------------|---------|-------|------|--|
| Enquiry Result | fc | 6b/6c | 1 | 00: Enquiry success. The device will report the historical data according to data retrievability interval. 01: Time point or time range invalid |

| Item | Channel | Type | Byte | Description |
|------|---------|------|------|--|
| | | | | 02: No data in this time or time range |


Note:

1. Use [Unix Timestamp Converter](#) to calculate the time.
2. The device only uploads no more than 300 data records per range enquiry.
3. When enquiring the data in time point, it will upload the data which is closest to the search point within the reporting interval range. For example, if the device's reporting interval is 10 minutes and users send command to search for 17:00's data, if the device find there is data stored in 17:00, it will upload this data; if not, it will search for data between 16:50 to 17:10 and upload the data which is closest to 17:00.

Example:

Enquire the historical data in a time range.

| fd6c 64735b63 7c885b63 | | |
|------------------------|------|--|
| Channel | Type | Value |
| fd | 6c | Start time: 64 73 5b 63 => 63 5b 73 64 = 1666937700s End time: 7c 88 5b 63 => 63 5b 88 7c = 1666943100s |

Reply:

| fc6c00 | | |
|---------|------|---------------------|
| Channel | Type | Value |
| fc | 6c | 00: Enquiry success |

| 20ce 1932ec64 17000203ff | | | |
|--------------------------|------|---------------------------------------|---------------------------|
| Channel | Type | Time Stamp | Value |
| 20 | ce | 1932ec64 => 64ec3219 = 1693200921s | 1700 => ID 02 => Dwell |

| 20ce 1932ec64 17000203ff | | | |
|--------------------------|------|------------|--------------|
| Channel | Type | Time Stamp | Value |
| | | | 03 => Ignore |

Chapter 9. Communication Protocol(WLAN)

Periodic Report

```
{
  "device_info": {
    "device_model": "VS373-470M",
    "device_sn": "6806E51154140003",
    "device_mac": "7c:2c:67:8c:da:20",
    "ipAddress": "192.168.2.100",
    "time": "2025-08-18 20:04:06"
  },
  "periodic_report": {
    "room_usage": {
      "detect_status": 0,//0: Normal; 1: Vacant; 3: Out of bed; 4:Fall
      "target_status": 0,//0: Normal; 1: Motionless; 3: Lying
      "current_use_time": 1053,
      "total_use_time": 10222
    },
    "breath_info": {
      "breath_status": 1,//1: Vacant or Not Scheduled; 2: Normal; 3:Tachypnea; 4:Bradycardia; 5: Unable Detect
      "breath_rate": 0
    },
    "regions": [{
      "sub_no": 0,
      "type": 2,//0: Custom; 1:Bed; 2: Door; 3: Ignore
      "status": 1//0: Occupancy; 1: Vacant
    }, {
      "sub_no": 1,
      "type": 2,
      "status": 1
    }, {
      "sub_no": 2,
      "type": 1,
      "status": 1,
      "leave_time": 550
    }
  ]
}
```

```
}
}
```

Trigger Report

Occupancy Trigger

```
{
  "device_info": {
    "device_model": "VS373-915M",
    "device_sn": "6806E51510750004",
    "device_mac": "d8:3b:da:9e:6e:a4",
    "ipAddress": "192.168.130.157",
    "time": "2025-08-26 10:34:03"
  },
  "trigger_data": {
    "type": 0,
    "event": 4,//0:Fall; 1:Motionless; 2:Dwell; 3:Out-of-bed; 4:Occupancy; 5:Vacant; 6:Bradycardia; 7:Tachypnea; 8:Lying
    "status": 1//1:Alarm; 2:Resolve; 3:Ignore; 4: Status report
  }
}
```

Out-of-Bed Alarm

```
{
  "device_info": {
    "device_model": "VS373-915M",
    "device_sn": "6806E41970333123",
    "device_mac": "24:85:18:8c:17:ef",
    "ip_address": "192.168.2.164",
    "time": "2025-09-06 14:13:28"
  },
  "trigger_data": {
    "type": 0,
    "trigger_id": 1073,
    "event": 3,//0:Fall; 1:Motionless; 2:Dwell; 3:Out-of-bed; 4:Occupancy; 5:Vacant; 6:Bradycardia; 7:Tachypnea; 8:Lying
    "status": 1//1:Alarm; 2:Resolve; 3:Ignore; 4: Status report
    "sub_no": 3
  }
}
```

```
}
}
```

Fall Alarm

```
{
  "device info": {
    "device model": "Vs373-915M",
    "device sn": "6806E51510750004",
    "device mac": "d8:3b:da:9e:6e:a4",
    "ipAddress": "192.168.130.157",
    "time": "2025-08-18 20:44:34",
    "trigger data": {
      "type": 0,
      "trigger id": 266,
      "event": 0, //0:Fall, 1:Motionless, 2:Dwell, 3:Out-of-bed, 4:Occupancy, 5:Vacant; 6:Bradycardia; 7:Tachypnea; 8:Lying
      "status": 1, //1:Alarm; 2:Resolve; 3:Ignore; 4: Status report
      "location": " (565, -838, 277)"
    }
  }
}
```

Dwell Alarm

```
{
  "device info": {
    "device model": "Vs373-915M",
    "device sn": "6806E51510750004",
    "device mac": "d8:3b:da:9e:6e:a4",
    "ipAddress": "192.168.130.157",
    "time": "2025-08-18 20:44:34",
    "trigger data": {
      "type": 0,
      "trigger id": 266,
      "event": 2, //0:Fall, 1:Motionless, 2:Dwell, 3:Out-of-bed, 4:Occupancy, 5:Vacant; 6:Bradycardia; 7:Tachypnea; 8:Lying
      "status": 1, //1:Alarm; 2:Resolve; 3:Ignore; 4: Status report
      "location": " (565, -838, 277)"
    }
  }
}
```

```
}
}
```

Lying Alarm

```
{
  "device info": {
    "device model": "Vs373-915M",
    "device sn": "6806E51510750004",
    "device mac": "d8:3b:da:9e:6e:a4",
    "ipAddress": "192.168.130.157",
    "time": "2025-08-18 20:44:34",
    "trigger data": {
      "type": 0,
      "trigger id": 266,
      "event": 8, //0:Fall, 1:Motionless, 2:Dwell, 3:Out-of-bed, 4:Occupancy, 5:Vacant; 6:Bradycardia; 7:Tachypnea; 8:Lying
      "status": 1, //1:Alarm; 2:Resolve; 3:Ignore; 4: Status report
      "location": "(565, -838, 277)"
    }
  }
}
```

Breathing Detection

```
{
  "device info": {
    "device model": "Vs373-915M",
    "device sn": "6806E51510750004",
    "device mac": "d8:3b:da:9e:6e:a4",
    "ipAddress": "192.168.130.157",
    "time": "2025-08-18 20:44:34",
    "trigger data": {
      "type": 1,
      "event": 6, //0:Fall; 1:Motionless; 2:Dwell; 3:Out-of-bed; 4:Occupancy; 5:Vacant; 6:Bradycardia; 7:Tachypnea; 8:Lying
      "status": 4, //1:Alarm; 2:Resolve; 3:Ignore; 4: Status report
      "sub_no": 1,
      "respiratory_rate": 22
    }
  }
}
```

```
}  
}
```


Chapter 10. Services

Milesight provides customers with timely and comprehensive technical support services. End-users can contact your local dealer to obtain technical support. Distributors and resellers can contact directly with Milesight for technical support.

Technical Support Mailbox: iot.support@milesight.com

Online Support Portal: <https://support.milesight-iot.com>

Resource Download Center: <https://www.milesight.com/iot/resources/download-center/>

MILESIGHT CHINA

TEL: +86-592-5085280

FAX: +86-592-5023065

Add: Building C09, Software Park Phase III, Xiamen 361024, Fujian, China